


Engine Oil Draining and Filling

Special Tool(s) / General Equipment


Oil Drain Equipment

Draining

1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).
2. **NOTE:** Use a shop towel when removing the oil filter housing to prevent oil from spilling on the engine or accessory components.
 1. Loosen the oil filter housing and allow the oil to drain out of the housing and down into the engine.
 2. Remove the oil filter housing and discard the oil filter element.
 3. Remove and discard the O-ring seals.

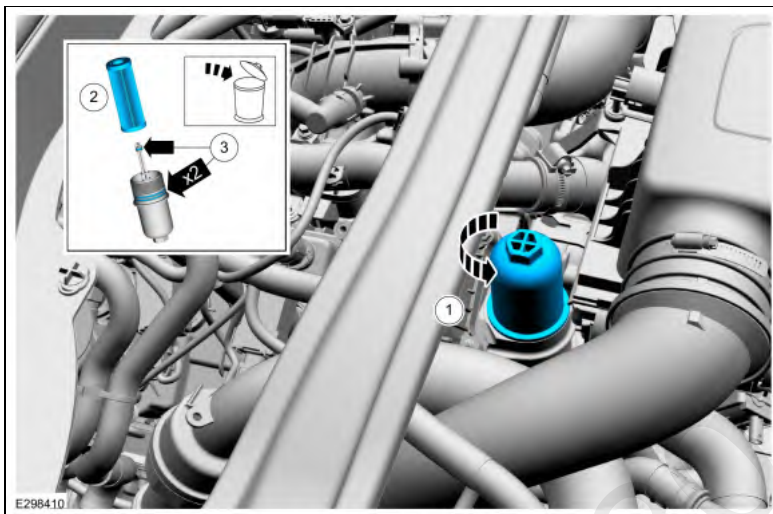

3. Remove the fasteners and the underbody shield.

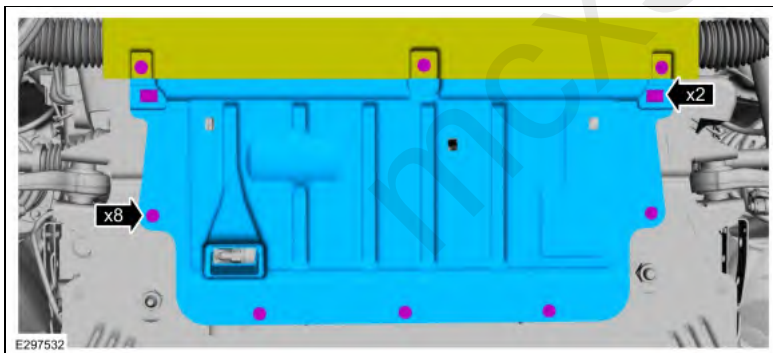

4. **NOTE:** The drain plug should be removed and installed by hand, do not use tools.
 1. Turn the oil drain plug by hand counterclockwise 120 degrees.
Use the General Equipment: Oil Drain Equipment
 2. Pull the oil drain plug out of the oil pan.
 3. After the oil has drained, push the oil drain plug into the oil pan.
4. **NOTICE:** Overtightening will damage the oil drain plug and possibly the oil pan.
Turn the oil drain plug by hand clockwise 120 degrees.