



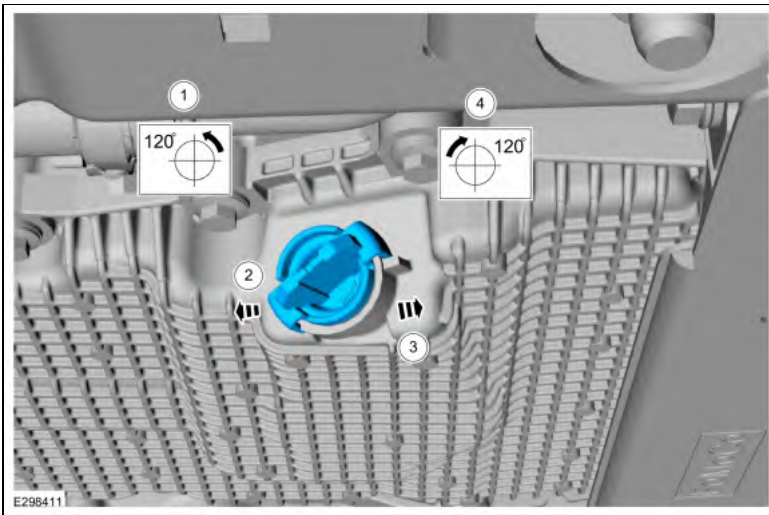

Filling

1. Install the underbody shield and the fasteners.
Torque: 22 lb.in (2.5 Nm)

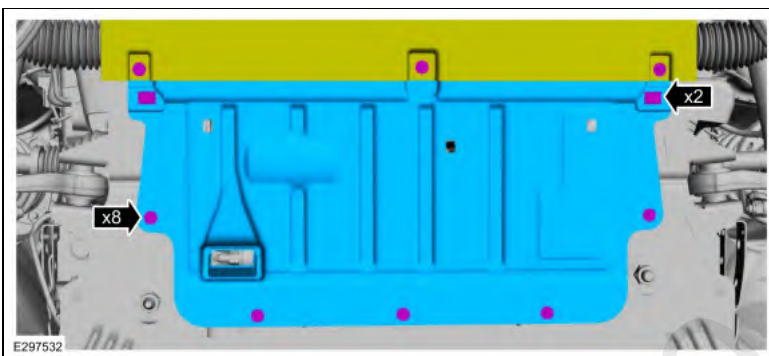

2. **NOTE:** If the filter housing stem is damaged or missing the oil will flow through the reservoir drain port and a **loss** of engine oil pressure will occur.

Inspect the oil filter housing and stem for damage including cracks or separation of the stem from the housing. If damaged, a new oil filter housing assembly must be installed.