



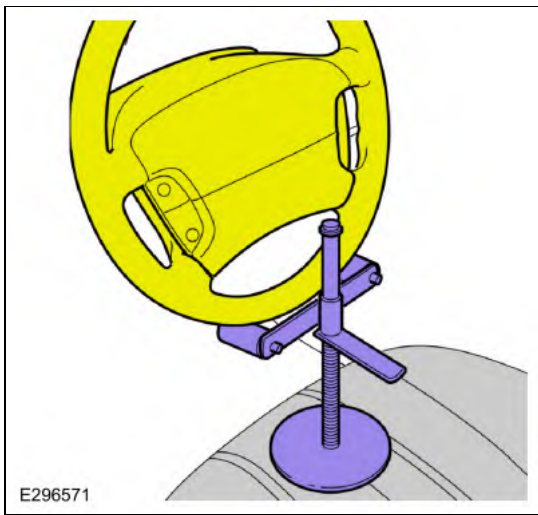

3. Release the fuel system pressure.
Refer to: Fuel System Pressure Release (310-00B Fuel System - General Information - 3.0L EcoBoost, General Procedures).
4. Disconnect the battery ground.
Refer to: Battery Disconnect and Connect (414-01 Battery, Mounting and Cables, General Procedures).
5. Drain the cooling system.
Refer to: Engine Cooling System Draining, Vacuum Filling and Bleeding (303-03B Engine Cooling - 3.0L EcoBoost, General Procedures).
6. Recover the A/C system.
Refer to: Air Conditioning (A/C) System Recovery, Evacuation and Charging - Vehicles With: R1234YF Refrigerant (412-00 Climate Control System - General Information, General Procedures).
7. Remove the bolts and the suspension support bar.

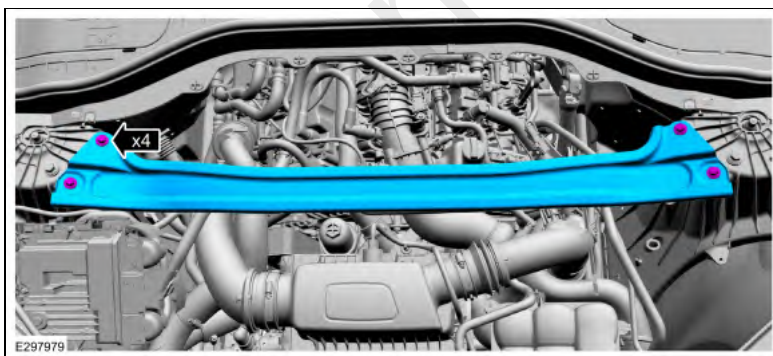

8. Remove the engine oil filter and drain the engine oil.
Refer to: Engine Oil Draining and Filling (303-01B Engine - 3.0L EcoBoost, General Procedures).
9. Remove the following items:
 1. Refer to: Cowl Panel (501-02 Front End Body Panels, Removal and Installation).
 2. Refer to: Degas Bottle (303-03B Engine Cooling - 3.0L EcoBoost, Removal and Installation).
 3. Refer to: Air Cleaner (303-12B Intake Air Distribution and Filtering - 3.0L EcoBoost, Removal and Installation).
 4. Refer to: Charge Air Cooler (CAC) Outlet Pipe (303-12B Intake Air Distribution and Filtering - 3.0L EcoBoost, Removal and Installation).
 5. Refer to: Air Cleaner Outlet Pipe LH (303-12B Intake Air Distribution and Filtering - 3.0L EcoBoost, Removal and Installation).
 6. LH side.
Refer to: Charge Air Cooler (CAC) Intake Pipe (303-12B Intake Air Distribution and Filtering - 3.0L EcoBoost, Removal and Installation).
10. Release the clamp and remove the coolant hose.