




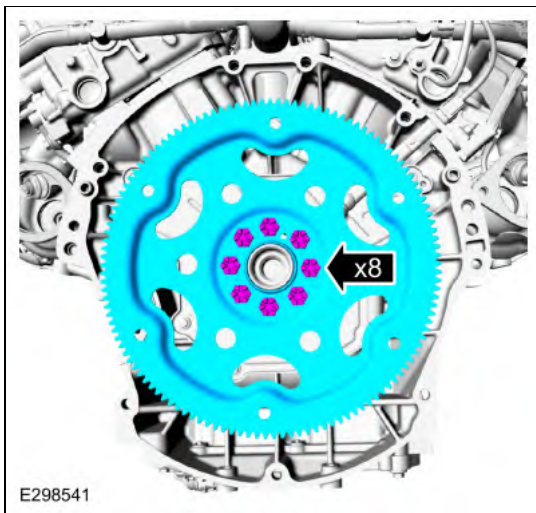

2. Remove the crankshaft sensor ring.

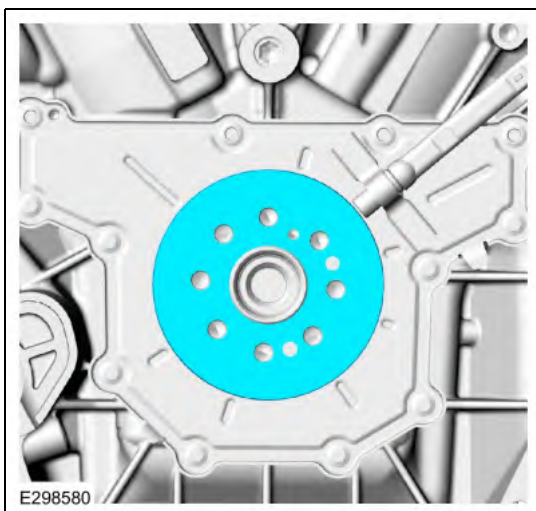

3. Inspect the crankshaft sensor ring for damage. If the crankshaft sensor ring has been dropped or has any visual damage, it must be discarded.

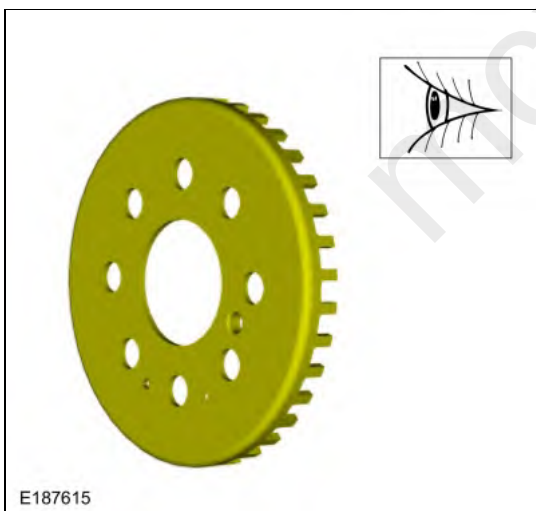

4. Remove the nut and the heat shield.