



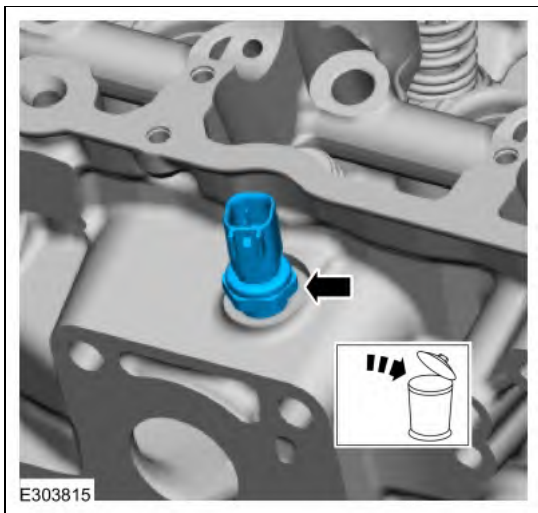


All cylinder heads

- Using the special tools, remove the keys, retainer and spring.
Use Special Service Tool: 303-300 (T87C-6565-A) Set, Valve Spring Compressor. , 303-350 (T89P-6565-A) Compressor, Valve Spring. , 303-1249 Valve Spring Compressor. , 303-1418 Compressor, Valve Spring.

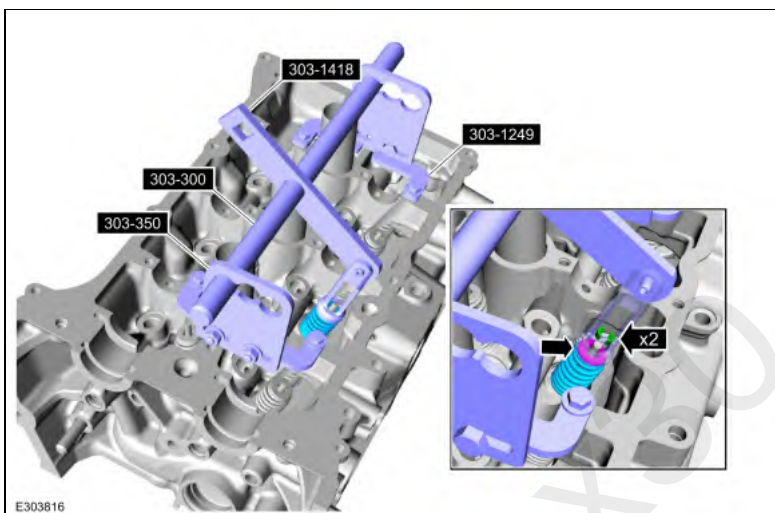

- Remove and discard the valve stem seal.

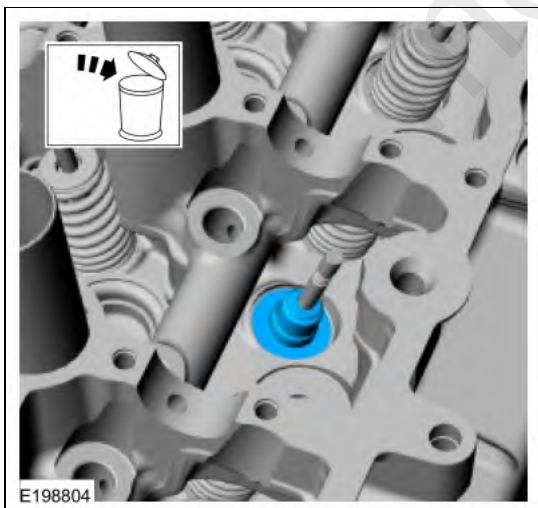

- Remove the valve from the cylinder head.
 - Repeat the previous steps for each of the remaining valves.