



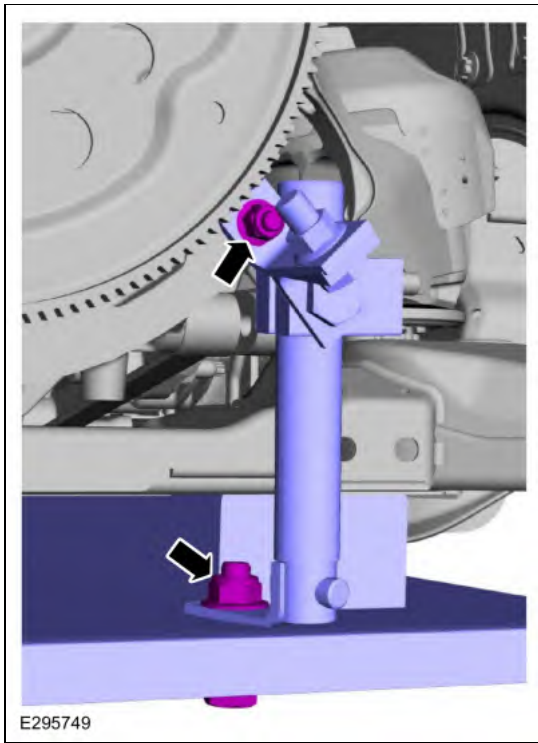

4. Remove the floor crane and chain.

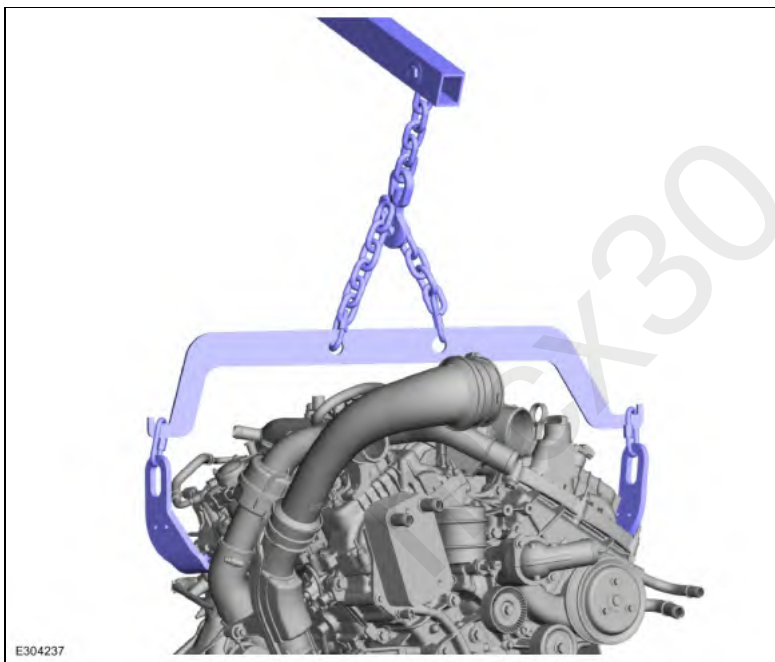

5. Remove the spreader bar and quick links.
Remove Special Service Tool: 303-1246 Engine Spreader Bar.