

Engine Oil Draining and Filling

Special Tool(s) / General Equipment



Oil Drain Equipment

Materials


Name	Specification
Motorcraft® Metal Brake Parts Cleaner - PM-4-A, PM-4-B	-

Draining

1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).
2.
 - Remove pin-type retainer.
 - Remove the bolts and the underbody shield.

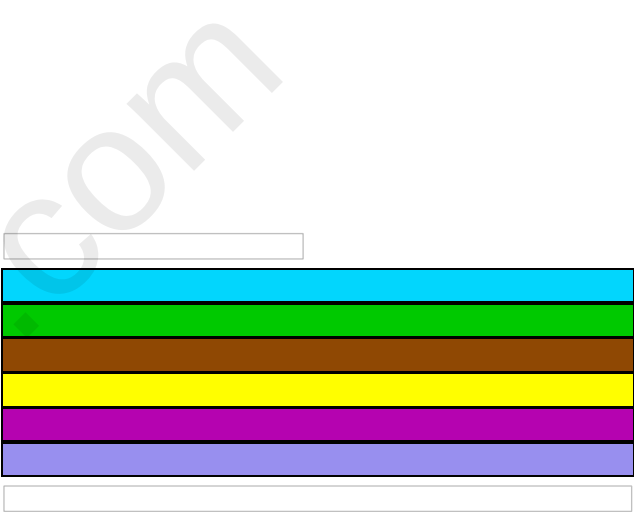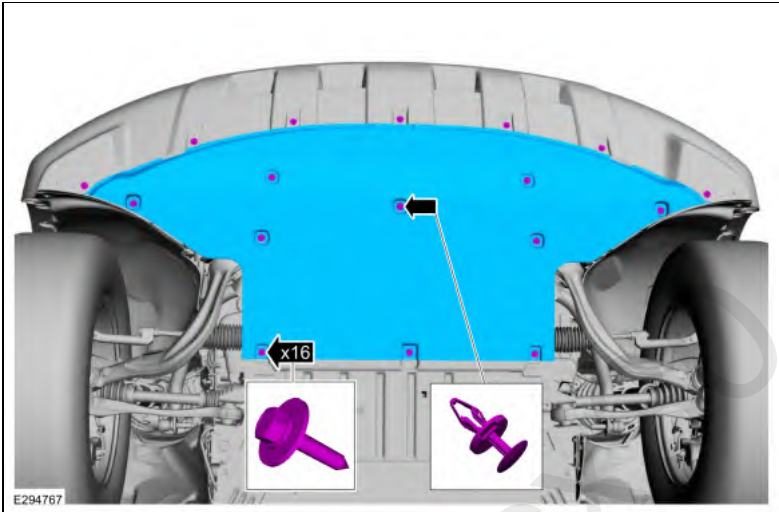

3. Remove the pin-type retainers, bolts and the rear underbody shield.

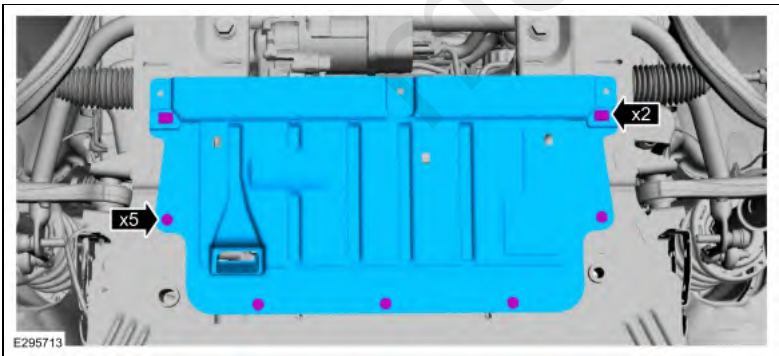

4.
 - Remove the oil pan drain plug and drain the engine oil.
Use the General Equipment: Oil Drain Equipment
 - Install the oil drain plug.
Torque: 19 lb.ft (26 Nm)