



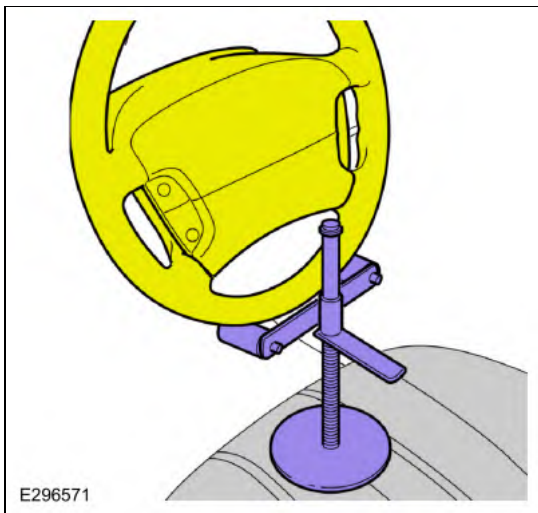

3. Release the fuel system pressure.
Refer to: Fuel System Pressure Release (310-00D Fuel System - General Information - 3.3L Duratec-V6 â€“ Hybrid (BP), General Procedures).
4. Disconnect the battery ground cable.
Refer to: Battery Disconnect and Connect (414-01 Battery, Mounting and Cables, General Procedures).
5. Disconnect the HEV high voltage battery.
Refer to: High Voltage System De-energizing (414-03 High Voltage Battery, Mounting and Cables, General Procedures).
6. Drain the cooling system.
Refer to: Engine Cooling System Draining, Vacuum Filling and Bleeding (303-03D Engine Cooling - 3.3L Duratec-V6 â€“ Hybrid (BP), General Procedures).
7. Remove the bolts and the suspension support bar.

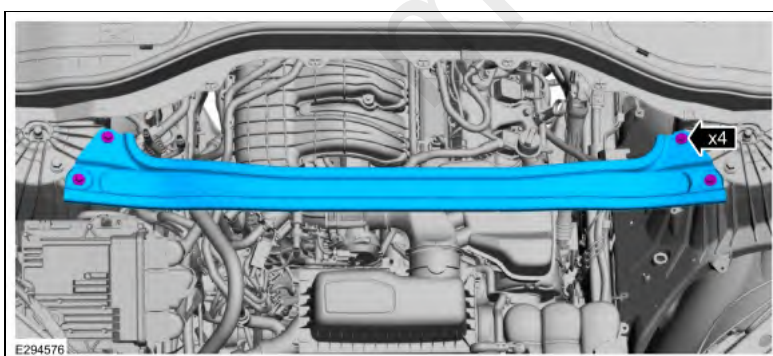

8. Remove the following items:
 1. Remove the air cleaner outlet pipe.
Refer to: Air Cleaner Outlet Pipe (303-12C Intake Air Distribution and Filtering - 3.3L Duratec-V6, Removal and Installation).
 2. Remove the air cleaner.
Refer to: Air Cleaner (303-12C Intake Air Distribution and Filtering - 3.3L Duratec-V6, Removal and Installation).
 3. Remove the A/C compressor.
Refer to: Air Conditioning (A/C) Compressor - 3.3L Duratec-V6 â€“ Hybrid (BP) (412-00 Climate Control System - General Information, Removal and Installation).
9. Remove the retainers and the upper radiator panel.