

 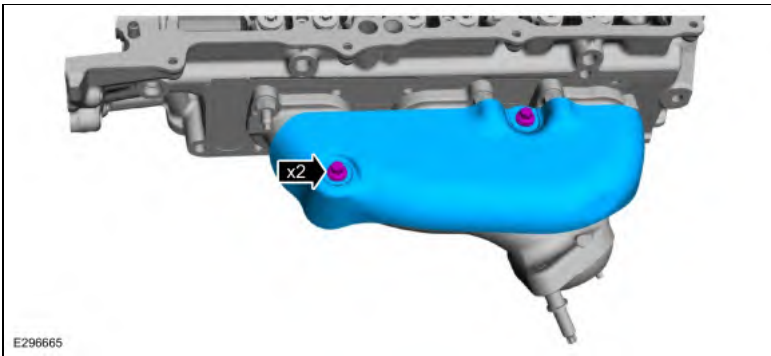
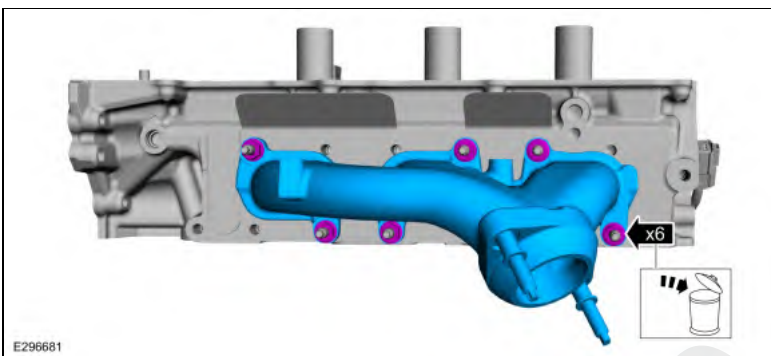


2.

- Remove the nuts and the exhaust manifold.
 - Discard the nuts.
 - Clean and inspect the exhaust manifold.
- Refer to: Exhaust Manifold Cleaning and Inspection (303-00 Engine System - General Information, General Procedures).



3. Remove and discard the studs and the exhaust manifold gasket.

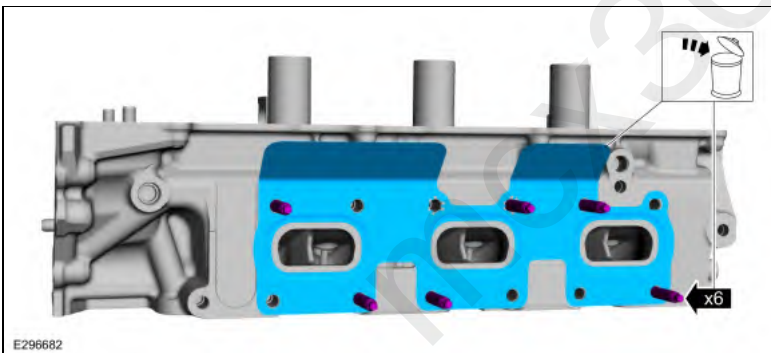

4. Remove the timing chain guide pin.