



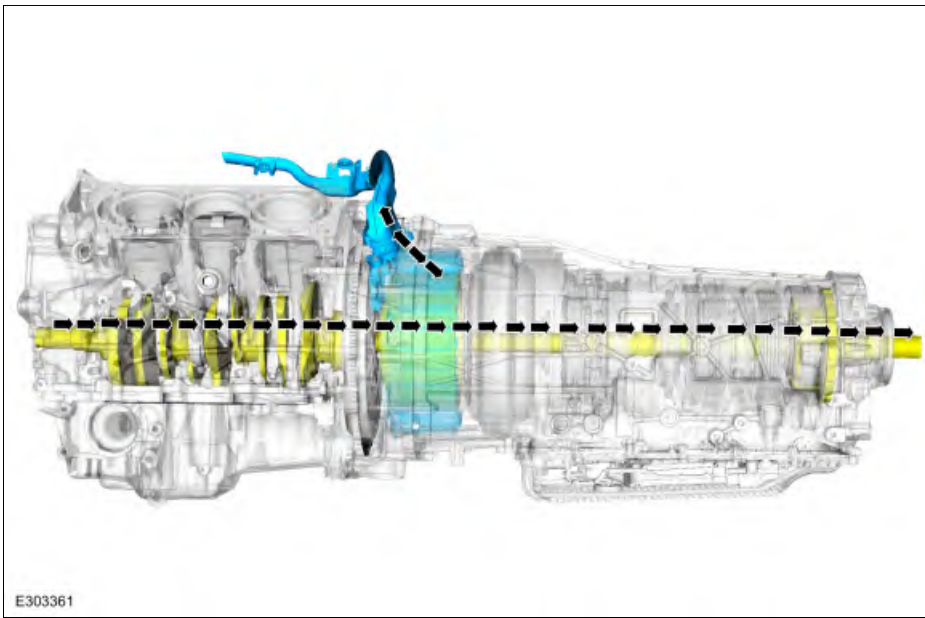

Hybrid Drive Mode – The engine disconnect clutch is engaged and the engine drives the transmission, providing torque to the wheels meeting driver demand. Requested torque above this is used to charge the high voltage battery through the electric motor. Electric motor can also assist the engine.

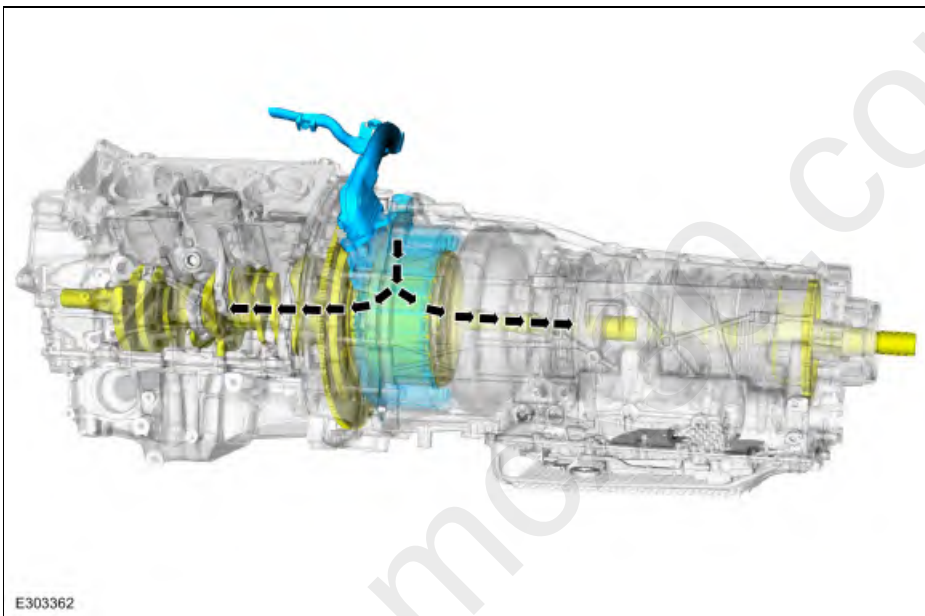

Engine Start Electric Motor – The engine disconnect clutch engages and the electric motor torque is split between the driveline and the engine to start the engine.

---