



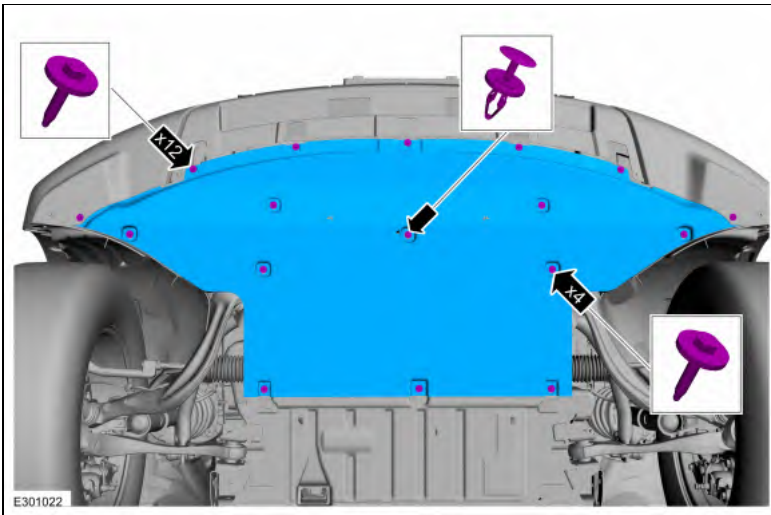

4. Release the clip and position the radiator air deflector aside.

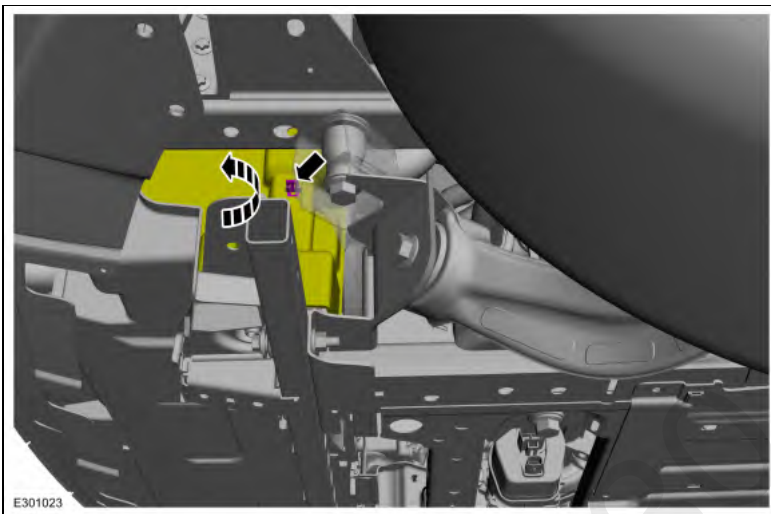

5. 

⚠ **WARNING: Be prepared to collect escaping fluid.**

Connect a hose to drain the coolant. Open the radiator drain valve and drain the engine coolant in a suitable, clean container.
Use the General Equipment: Fluid Container