

Coolant Outlet Connector

Special Tool(s) / General Equipment


Hose Clamp Remover/Installer

Removal


WARNING: Always allow the engine to cool before opening the cooling system. Do not unscrew the coolant pressure relief cap when the engine is operating or the cooling system is hot. The cooling system is under pressure; steam and hot liquid can come out forcefully when the cap is loosened slightly. Failure to follow these instructions may result in serious personal injury.

NOTE: Removal steps in this procedure may contain installation details.


1. Drain the cooling system.
Refer to: Engine Cooling System Draining, Vacuum Filling and Bleeding (303-03A Engine Cooling - 2.3L EcoBoost (201kW/273PS), General Procedures).
2. Remove the EGR cooler.
Refer to: Exhaust Gas Recirculation (EGR) Cooler (303-08A Engine Emission Control - 2.3L EcoBoost (201kW/273PS), Removal and Installation).
3. Loosen the clamp and position the CAC tube aside.

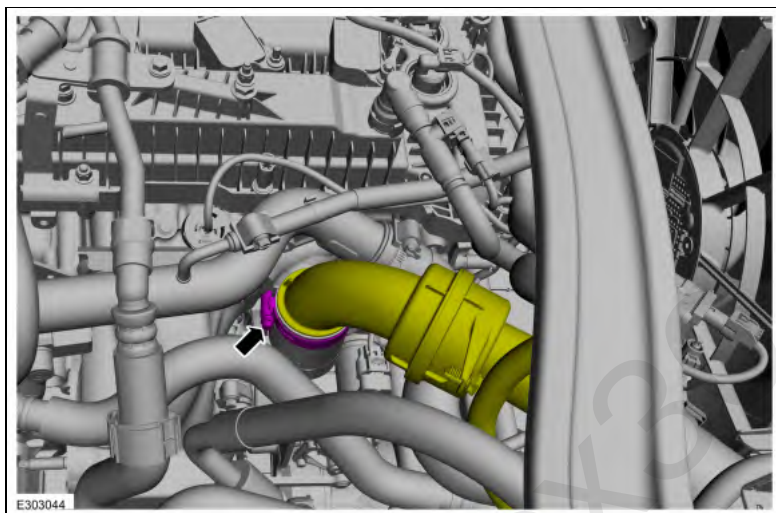

4. Loosen the clamps and position the coolant hoses aside.

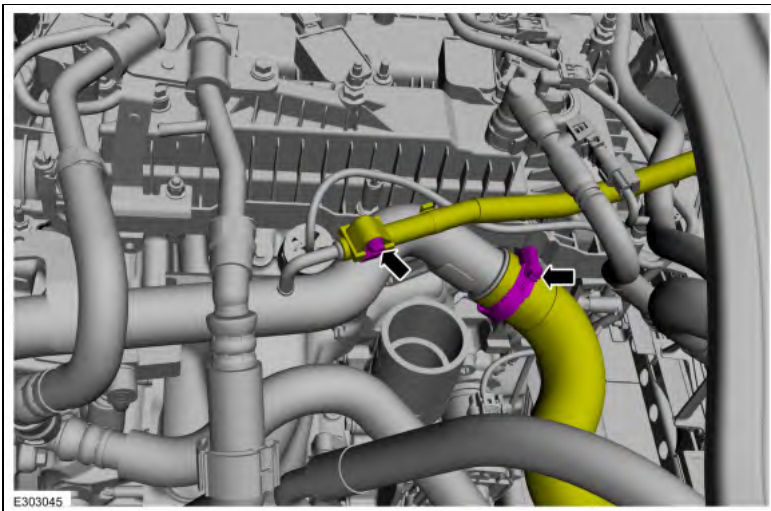

5. Disconnect the quick release couplings.

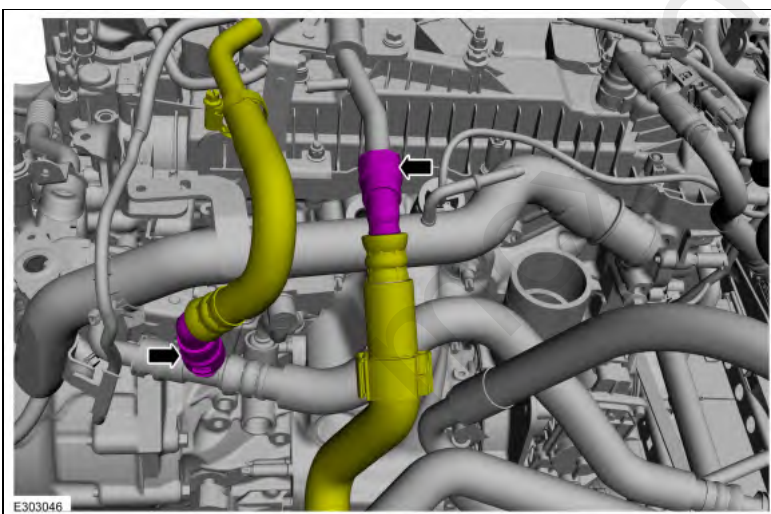

6. Detach the electrical wiring harness retainers.