


Removal and Installation

Block Heater

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Drain the cooling system.
Refer to: Engine Cooling System Draining, Vacuum Filling and Bleeding (303-03D Engine Cooling - 3.3L Duratec-V6 â€“ Hybrid (BP), General Procedures).
2. Remove the front LH wheel and tire.
Refer to: Wheel and Tire (204-04A Wheels and Tires, Removal and Installation).
3. Remove the LH fender splash shield.
Refer to: Fender Splash Shield (501-02 Front End Body Panels, Removal and Installation).
4. Detach the block heater electrical connector heat shield.

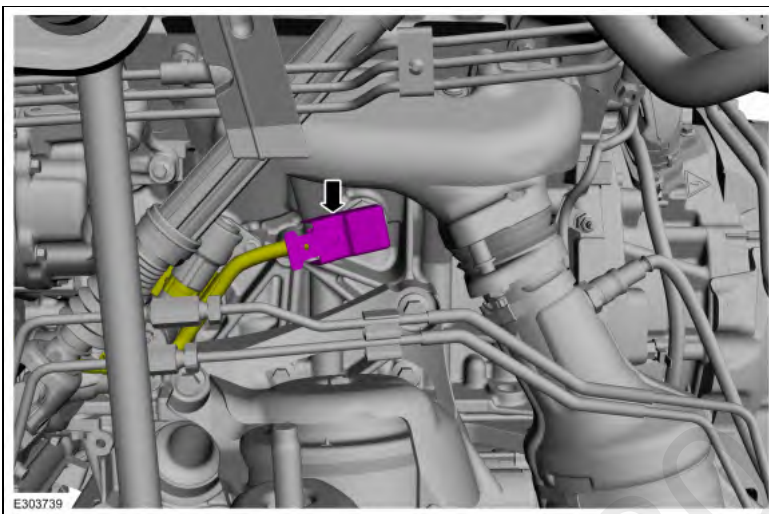

5. **NOTE:** Access the block heater from the inner fender well.
NOTE: Make sure the block heater wiring is routed and secured away from rotating or hot components.
Disconnect the block heater electrical connector.