



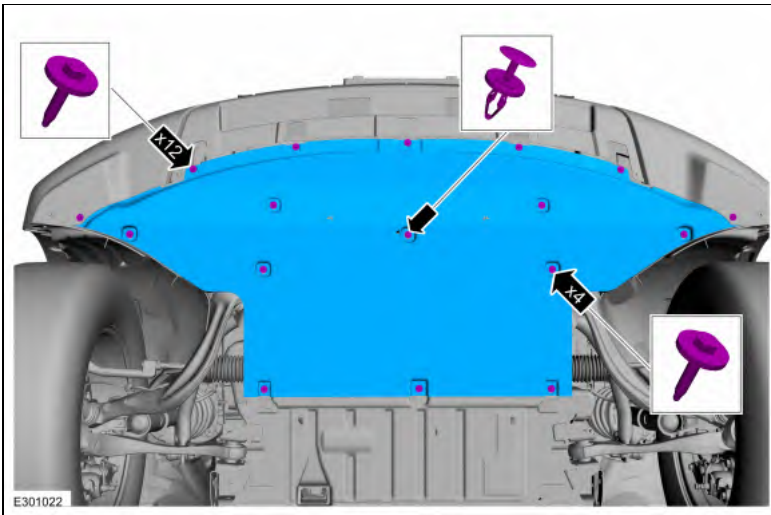

4. **NOTE:** Be prepared to capture escaping fluid.

NOTE: Use a drain hose to drain the coolant.

Disconnect the quick release coupling and drain the engine coolant in a suitable, clean container.
Use the General Equipment: Fluid Container

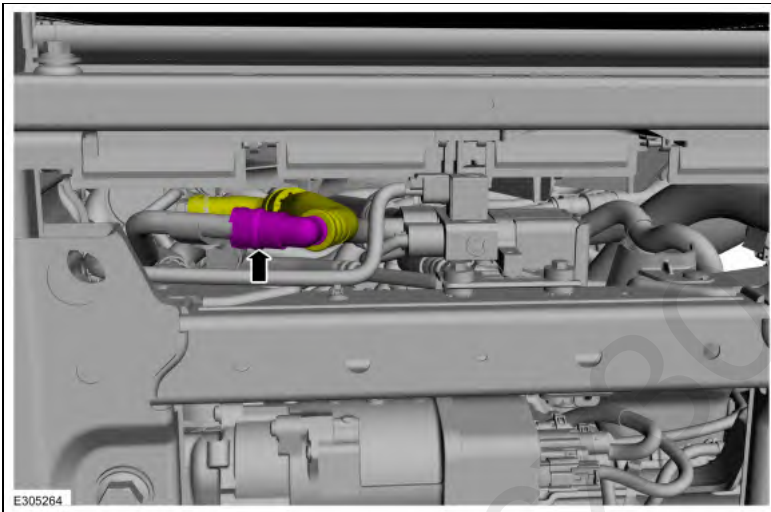

Filling

1. Connect the quick hose coupling.