




6. Release the fuel pump driver module retaining tab and then remove the fuel pump driver module from the bracket.

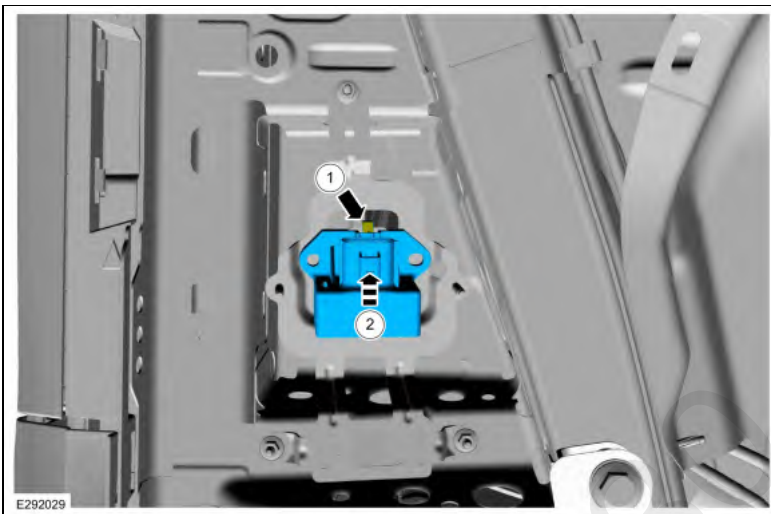

Heavy duty fuel pump driver module

7. Disconnect the wire harness retainer, then disconnect the fuel pump driver module electrical connector.