




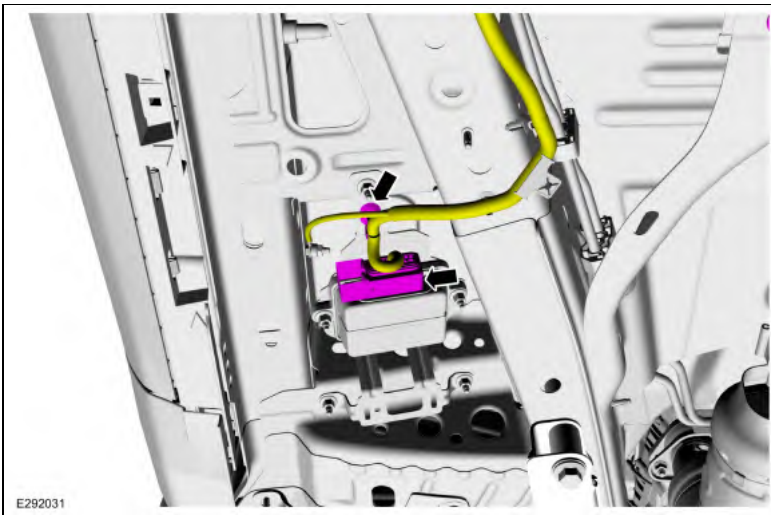


8. Remove the fuel pump driver module fasteners, then remove the fuel pump driver module.

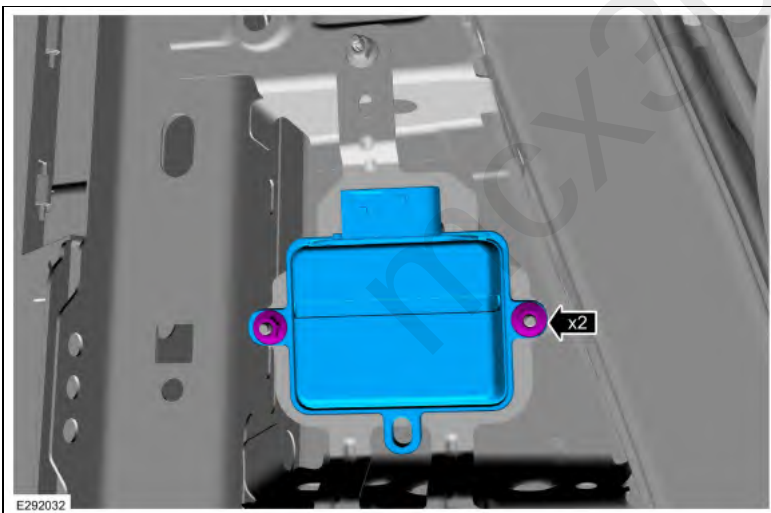

All Vehicles

 
9. Only if needed, remove the fasteners, then remove the fuel pump driver module bracket.

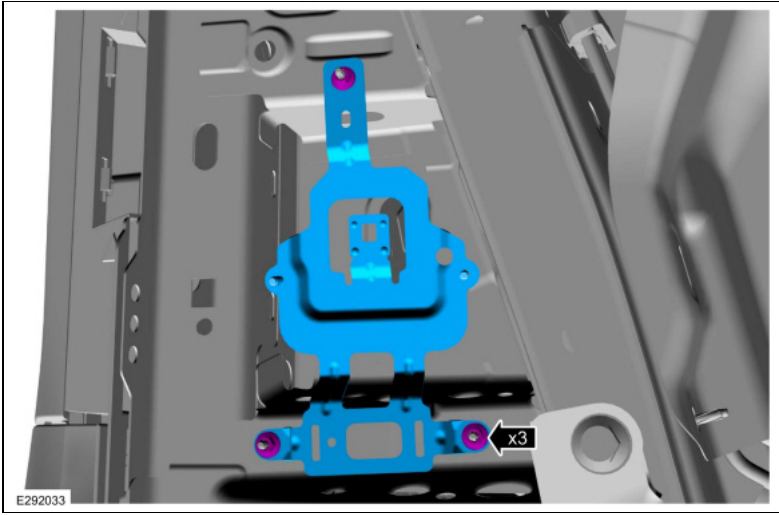

Installation


All Vehicles

- 1. Install the fuel pump driver module bracket if removed, then install and tighten the fasteners.
Torque: 97 lb.in (11 Nm)

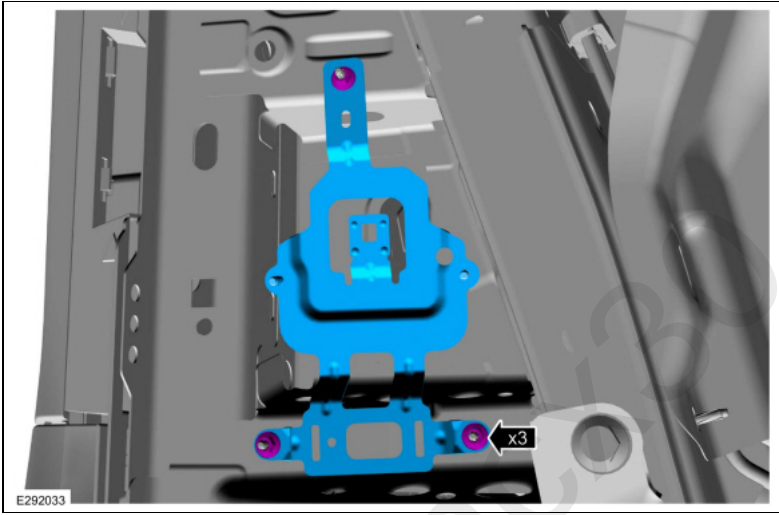


Heavy duty fuel pump driver module

- 2. Install the fuel pump driver module, then install and tighten the fuel pump driver module fasteners.
Torque: 97 lb.in (11 Nm)

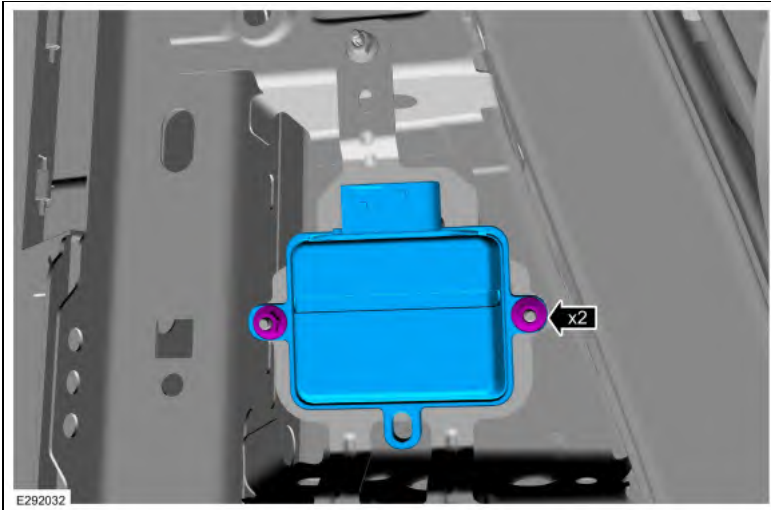


3. Connect the fuel pump driver module electrical connector , then connect the wire harness retainer.

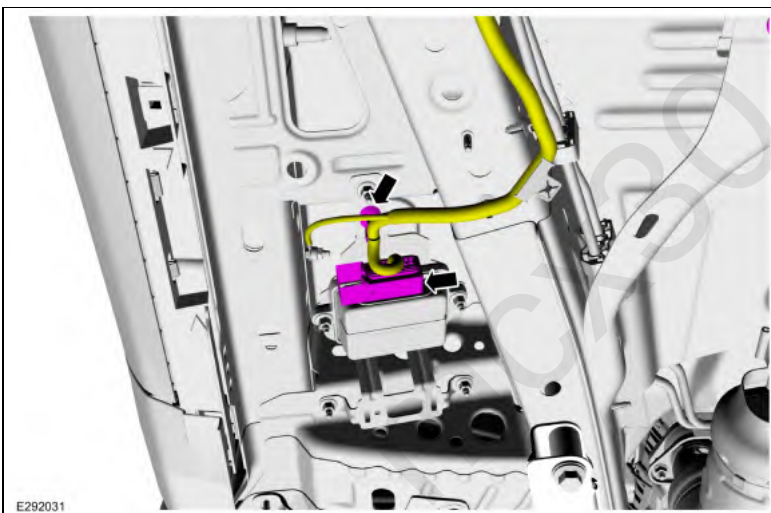


Standard fuel pump driver module

4. Install the fuel pump driver module to the bracket until it clicks into position.

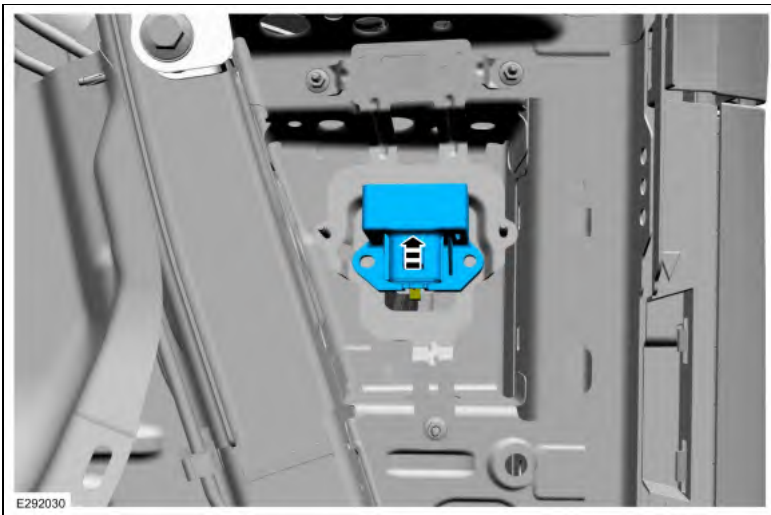

5. Connect the fuel pump driver module electrical connector.

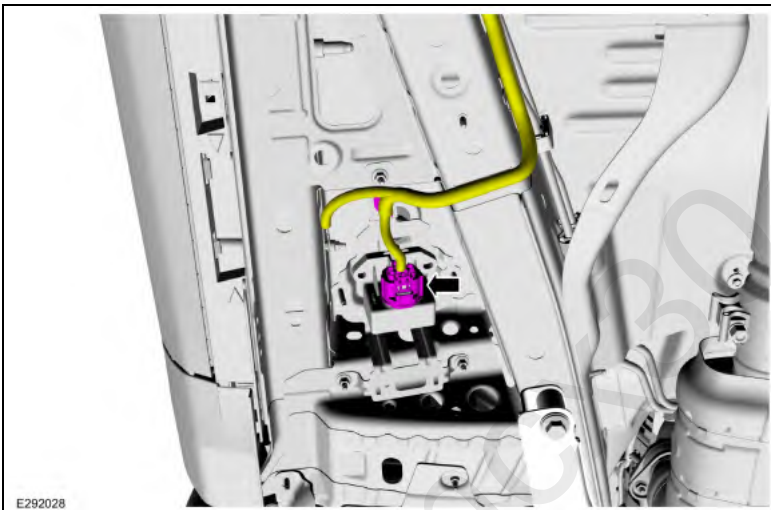


All Vehicles

6. **NOTE:** The shield needs to be installed underneath the fender splash shield.

If equipped, install the shield, then install and tighten the fasteners.


Torque:

- 1, tighten to: : 22 lb.in (2.5 Nm)
- 2, tighten to: : 53 lb.in (6.0 Nm)
- 3, tighten to: : 53 lb.in (6.0 Nm)

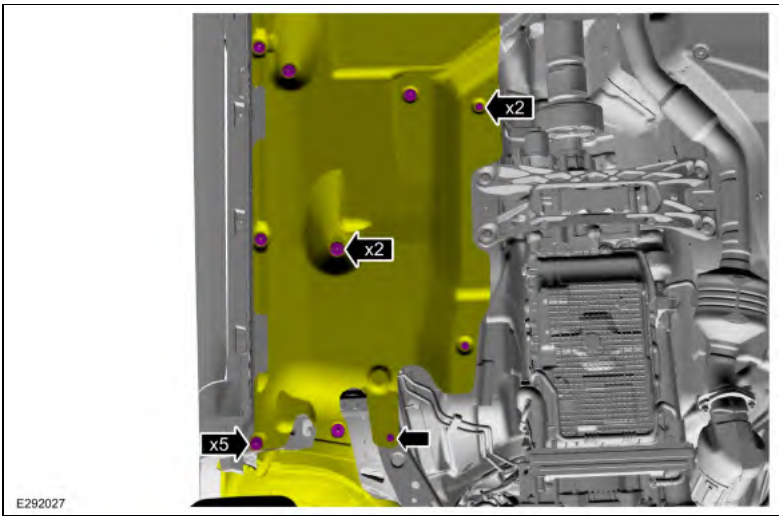

7. **NOTE:** The shield needs to be installed underneath the fender splash shield.

If equipped, install the shield, then install and tighten the fasteners.
Torque:
Screw and washer, tighten to: : 22 lb.in (2.5 Nm)
Nut and washer tighten to: : 53 lb.in (6.0 Nm)

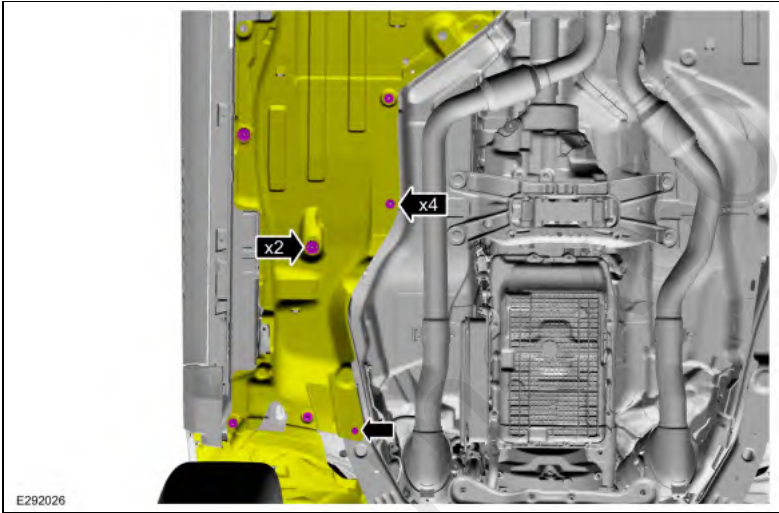


High-Pressure Fuel Pump

Removal


NOTICE: Do not loosen any fittings or plugs on the high-pressure fuel pump.

All Vehicles

1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).
2. Release the fuel system pressure.
Refer to: Fuel System Pressure Release (310-00B Fuel System - General Information - 3.0L EcoBoost, General Procedures).
3. Disconnect the battery negative cable.
Refer to: Battery Disconnect and Connect (414-01 Battery, Mounting and Cables, General Procedures).
4. Remove the cowl panel.
Refer to: Cowl Panel (501-02 Front End Body Panels, Removal and Installation).
5. Remove the intake manifold.
Refer to: Intake Manifold (303-01A Engine - 2.3L EcoBoost (201kW/273PS), Removal and Installation).
6. If equipped, remove the wire harness retaining nut and move the harness out of the way.

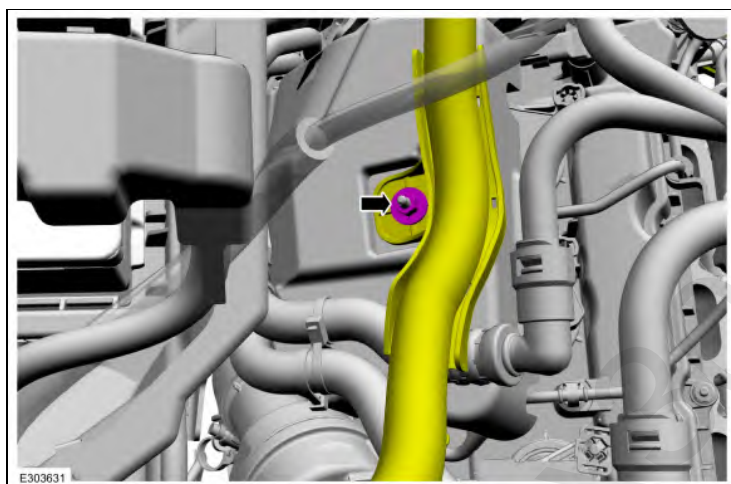


7. Detach the coolant hose retainer.

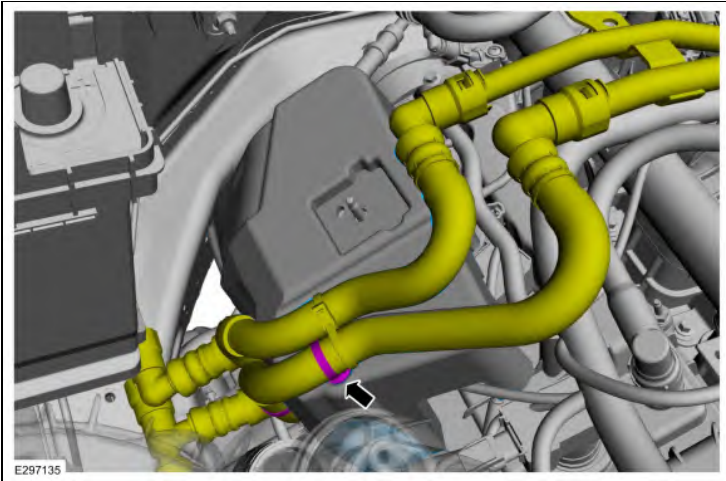

8. **NOTE:** When removing or installing the fuel injection pump noise insulator, spreading the openings will reduce the risk of damage.

Remove the fuel injection pump noise insulator.

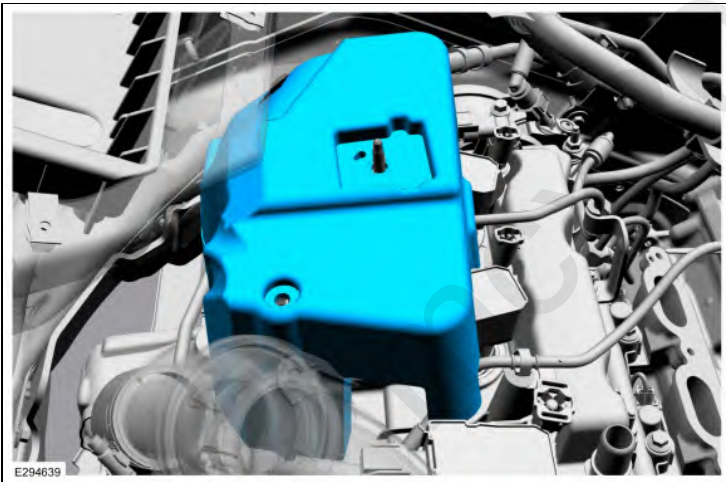

9. **NOTICE:** To release the fuel pressure in the high-pressure fuel tube, wrap the high-pressure fuel tube flare nuts with a shop towel to absorb any residual fuel pressure during the loosening of the high-pressure fuel tube flare nuts.

Remove the high-pressure fuel tube bracket nuts. Disconnect the high-pressure fuel tube flare nuts, then remove and discard the high-pressure fuel tube.

