



Fuel Charging and Controls - Component Location

3.3L Duratec - V6

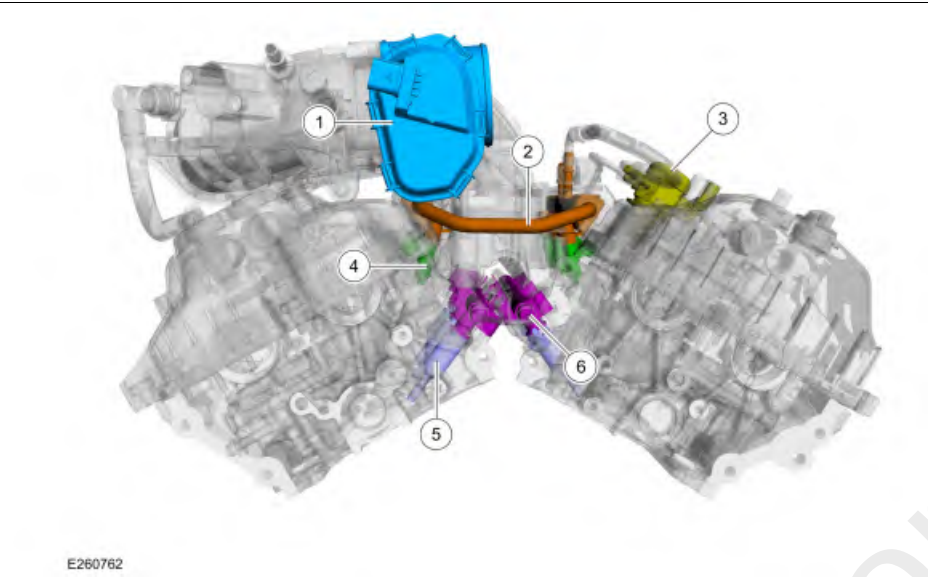

Item	Description
1	Throttle body
2	Port injection fuel rail assembly
3	High-pressure fuel pump
4	Port injection fuel injector (The fuel injectors are removed with the fuel rail.)
5	Direct injection fuel injector (The fuel injectors are removed with the fuel rail.)
6	Direct injection fuel rail

Fuel Pump Driver Module

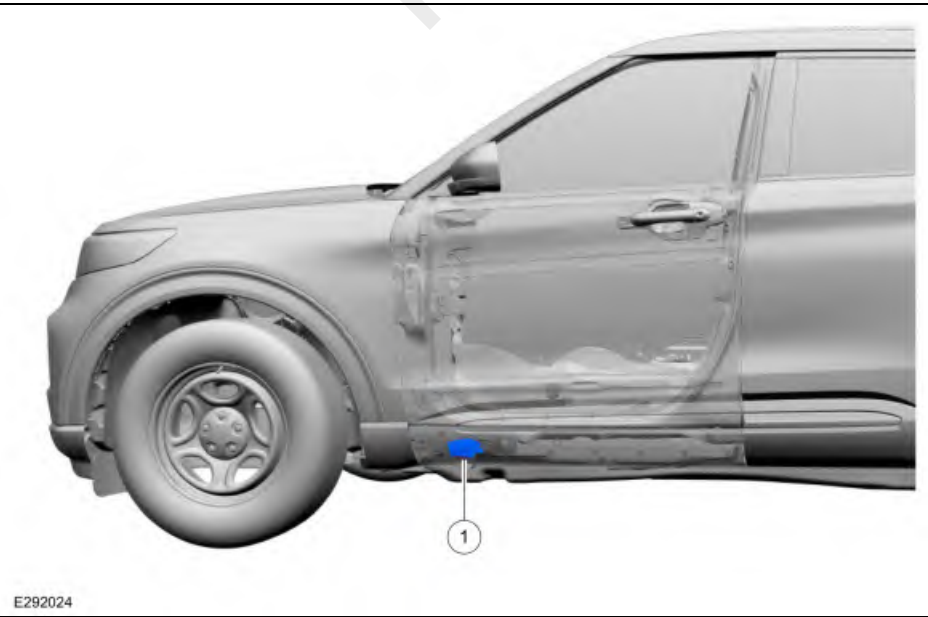

Item	Description
------	-------------