



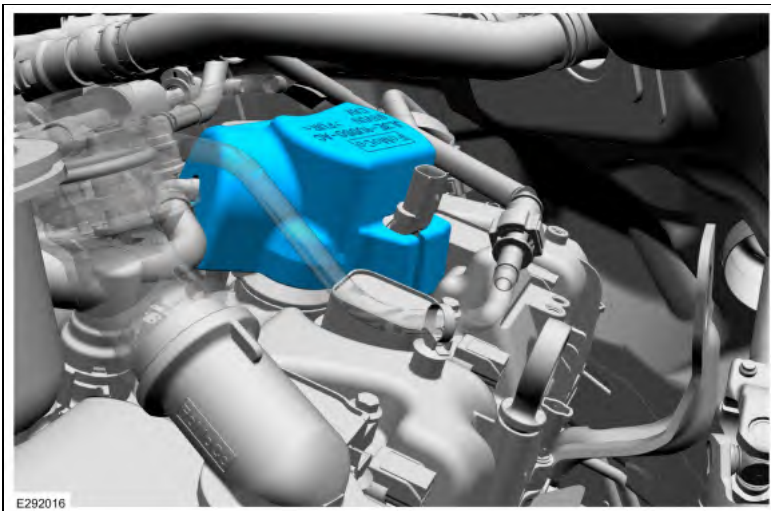

3. Remove the lower intake manifold.
Refer to: Lower Intake Manifold (303-01C Engine - 3.3L Duratec-V6, Removal and Installation).
4. Remove the cowl panel.
Refer to: Cowl Panel (501-02 Front End Body Panels, Removal and Installation).
5. Detach the harness retainer.

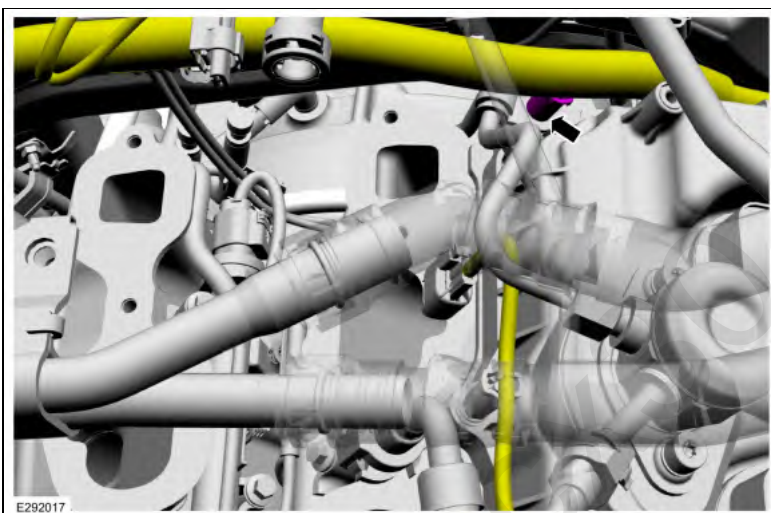

6. **NOTICE:** To release the fuel pressure in the high-pressure fuel tube, wrap the high-pressure fuel tube flare nuts with a shop towel to absorb any residual fuel pressure during the loosening of the high-pressure fuel tube flare nuts.
Remove and discard the high-pressure fuel tube retaining nut. Disconnect the high-pressure fuel tube flare nuts, then remove and discard the high-pressure fuel tube.