


| Item | Description                         |
|------|-------------------------------------|
| 1    | Wastegate vacuum sensor             |
| 2    | Turbocharger oil supply tube RH     |
| 3    | Turbocharger coolant supply tube RH |
| 4    | Turbocharger oil return tube RH     |
| 5    | Turbocharger RH                     |
| 6    | Turbocharger coolant return tube RH |

### 3.0L EcoBoost Turbocharger Controls

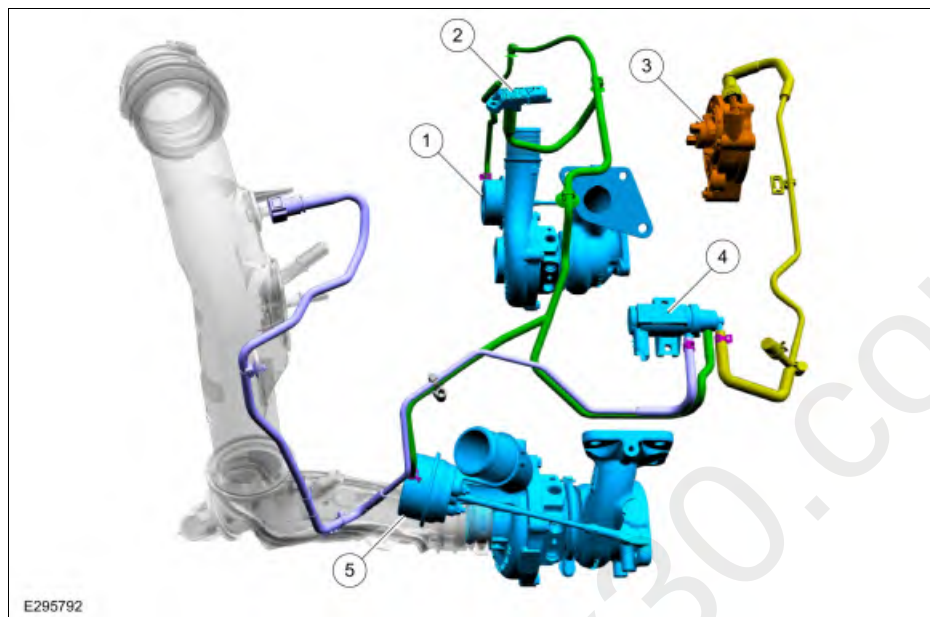

| Item | Description                      |
|------|----------------------------------|
| 1    | Turbocharger RH                  |
| 2    | Wastegate vacuum sensor          |
| 3    | Vacuum pump                      |
| 4    | Wastegate control valve solenoid |
| 5    | Turbocharger LH                  |