



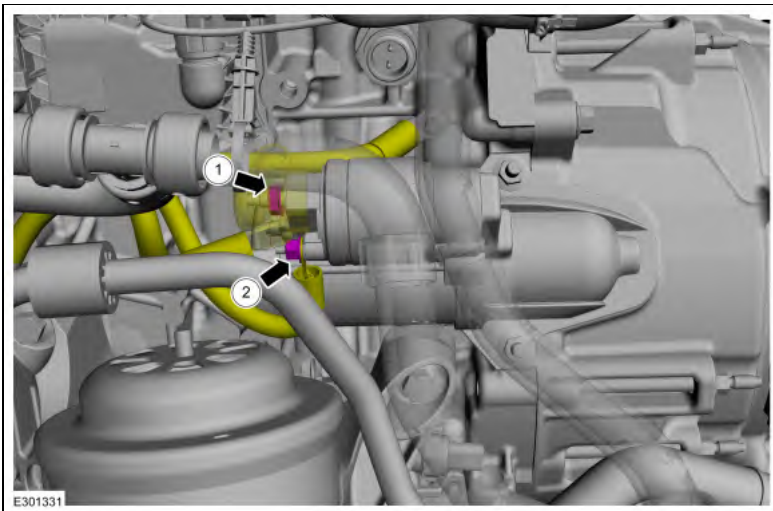

6. Remove the starter motor studbolts, then remove the starter motor.
Torque: 35 lb.ft (47.5 Nm)

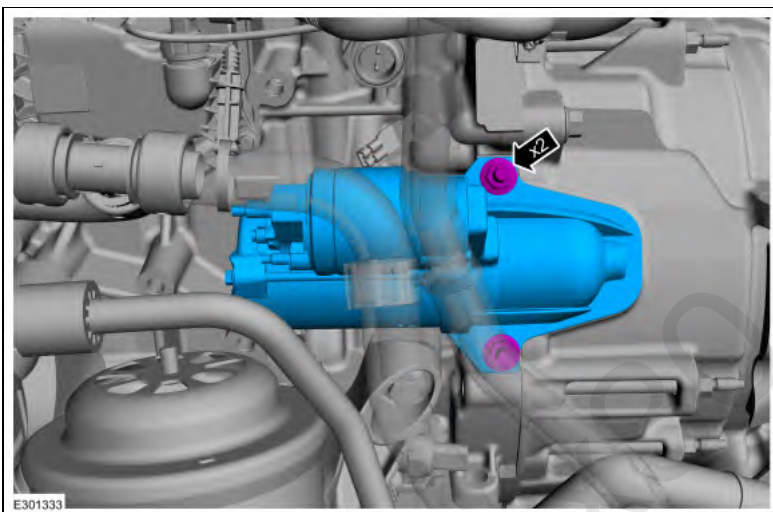

7. Inspect the starter motor drive gear and the flexplate or flywheel ring gear.
Refer to: Starter Motor Drive Gear and Flywheel Ring Gear Inspection (303-06A Starting System - 2.3L EcoBoost (201kW/273PS), General Procedures).

Installation

1. To install, reverse the removal procedure.