



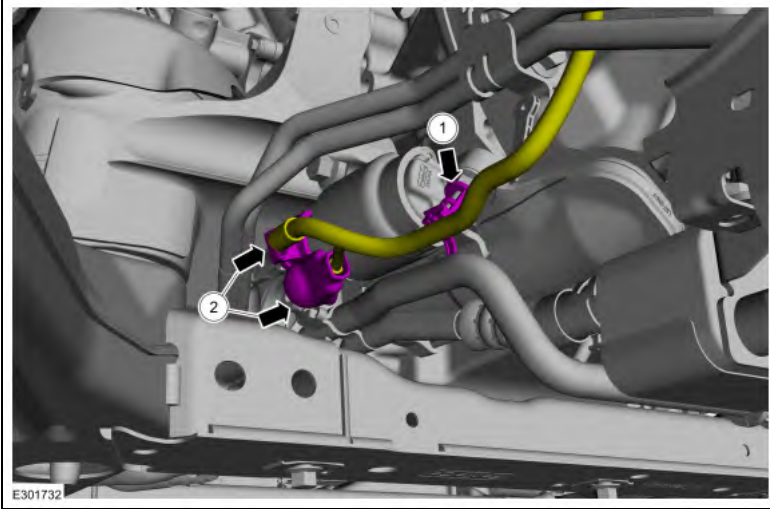

|  |
|--|
|  |
|  |
|  |
|  |
|  |
|  |
|  |
|  |

7.

1. Remove the starter motor solenoid battery cable nut and then disconnect the starter motor solenoid battery cable.  
*Torque: 106 lb.in (12 Nm)*
2. Remove the starter motor solenoid control wire nut and then disconnect the starter motor solenoid control wire.  
*Torque: 53 lb.in (6 Nm)*

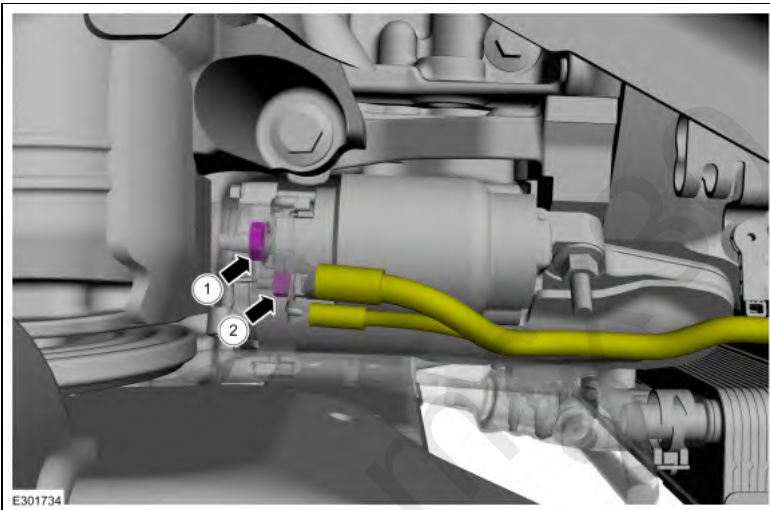

|  |
|--|
|  |
|  |
|  |
|  |
|  |
|  |
|  |
|  |

8. Remove the starter motor studbolts and remove the starter motor.  
*Torque: 35 lb.ft (48 Nm)*