


Ignition Coil-On-Plug


Removal

1. **NOTICE:** Do not pull the engine appearance cover forward or sideways to remove. Failure to press straight upward on the underside of the cover at the attachment points may result in damage to the cover or engine components.

Remove the nuts and the appearance cover.

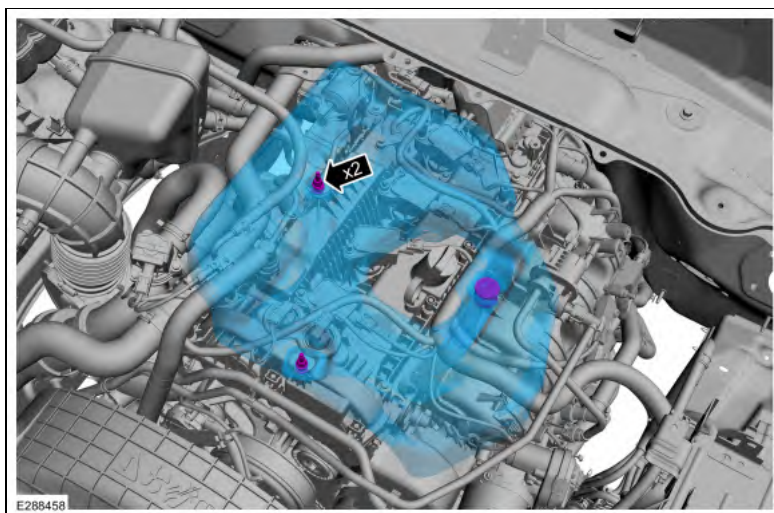

2. Detach the wiring harness retainers.

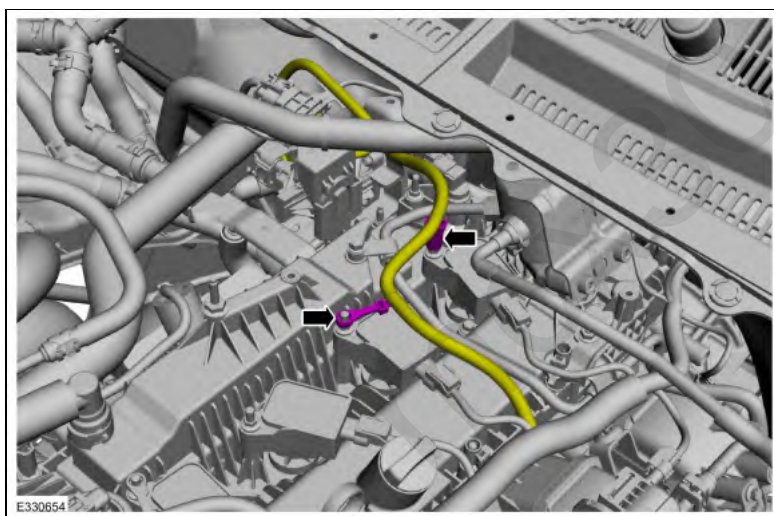

3.
 - Detach the wiring harness retainer.
 - **NOTE:** If equipped with a sliding cover over the locking tab, slide the cover back to gain access to the tab.

Press the locking tab on the ignition coil-on-plug electrical connector and disconnect the electrical connector from the ignition coil-on-plug.