



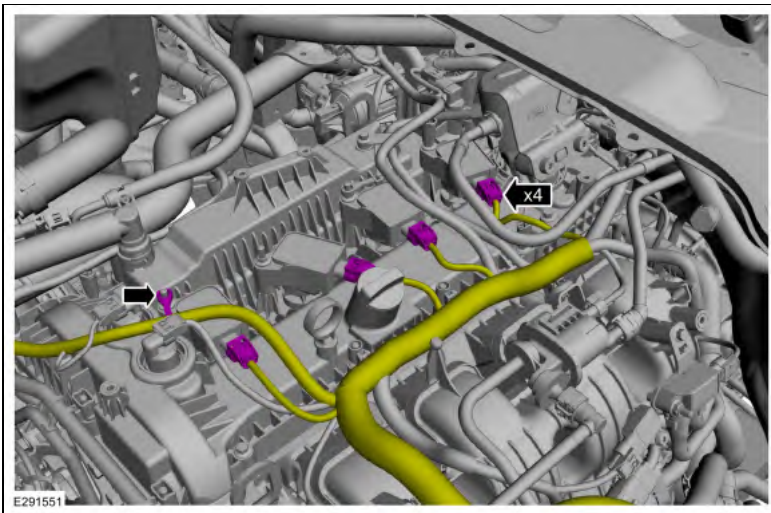

4. Use compressed air to remove any foreign material from the ignition coil-on-plugs and surrounding area before removing the ignition coil-on-plugs.

5. **NOTE:** When removing the ignition coil-on-plugs, a slight twisting motion will break the seal and ease removal.

Remove the retainers and the ignition coil-on-plugs.

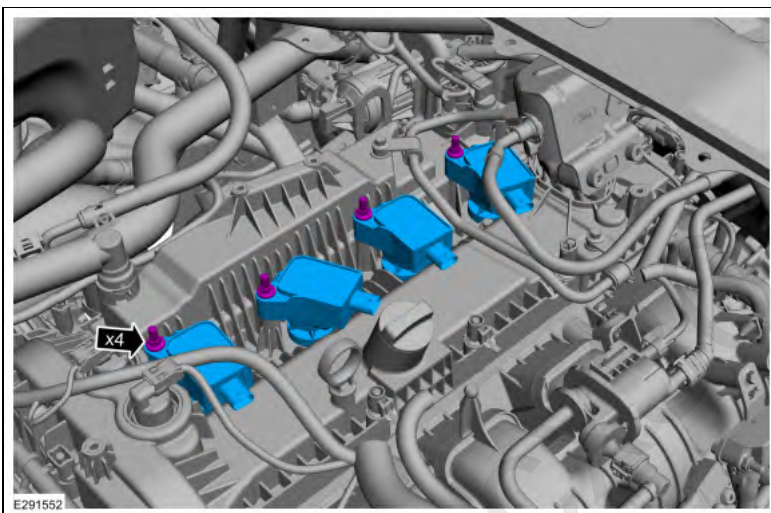

Installation

1. Inspect the ignition coil-on-plug assembly for cracks, rips or tears. Replace any damaged ignition coil-on-plug assemblies.