



Ignition Coil-On-Plug

Removal

1. Remove the bolts and the suspension support bar.

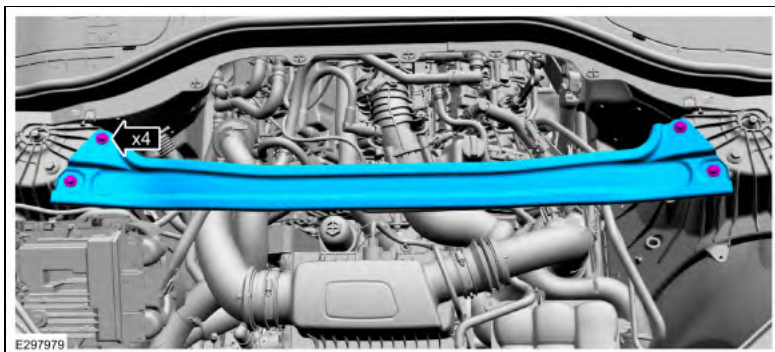

2.
 - Remove the coolant pipe bracket retaining bolts.
 - Remove the intake manifold bracket retaining bolts.

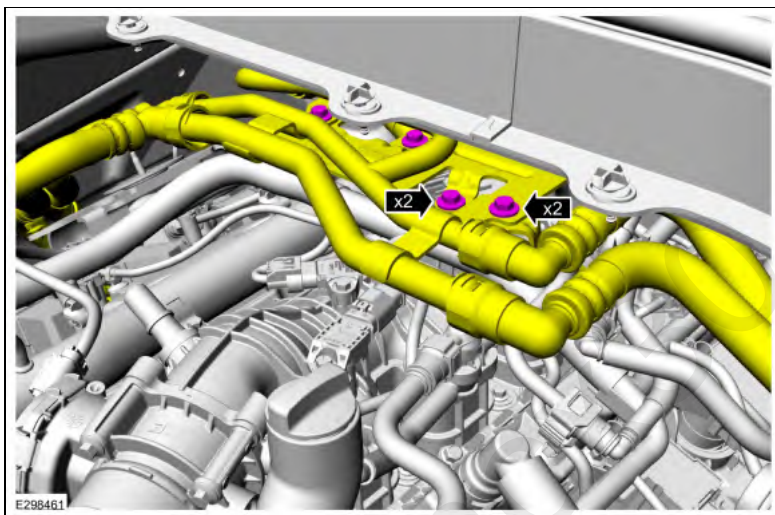

Left side

3. Remove the following items:
 1. Disconnect the crank case ventilation valve quick coupling and position it aside.
Refer to: Quick Release Coupling (310-00 Fuel System - General Information) .