

Engine Ignition

Diagnostics in this manual assume a certain skill level and knowledge of Ford-specific diagnostic practices. For information about these, REFER to: Diagnostic Methods (100-00 General Information, Description and Operation).

For PCM DTC,

REFER to: Electronic Engine Controls (303-14C Electronic Engine Controls - 3.3L Duratec-V6/3.3L Duratec-V6 â€“ Hybrid (BP), Diagnosis and Testing).

For driveability symptoms without DTC, Refer to Powertrain Control/Emissions Diagnosis (PC/ED) manual. See Section 3, Symptom Charts.

mcx30.com