

## Ignition Coil-On-Plug

### Removal

#### Right side


**NOTE:** The upper intake manifold must be removed to access the RH ignition coil-on-plugs. Right side

1. Remove the upper intake manifold.  
Refer to: Upper Intake Manifold (303-01C Engine - 3.3L Duratec-V6, Removal and Installation).

#### Both sides

2. **NOTE:** Heater hoses not shown for clarity

Disconnect the ignition coil-on-plug electrical connectors.

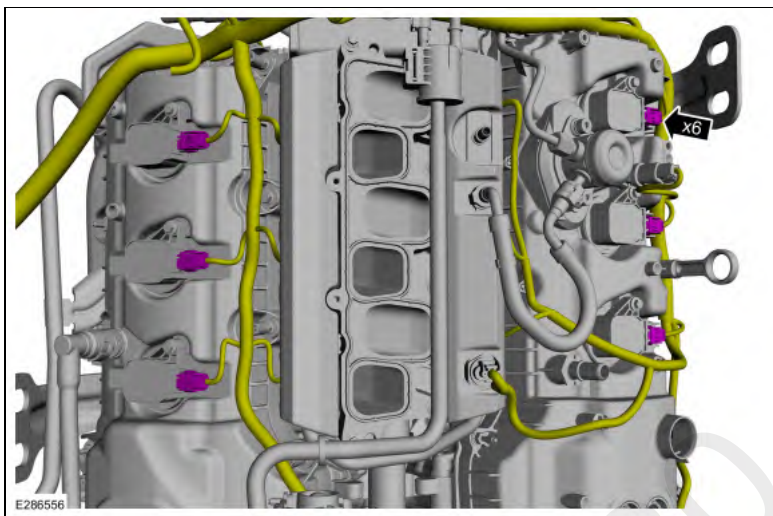

3. Use compressed air to remove any foreign material in the ignition coil-on-plugs and surrounding area before removing the ignition coil-on-plugs.
4. **NOTE:** When removing the ignition coil-on-plugs, a slight twisting motion will break the seal and ease removal.
  - Remove the ignition coil-on-plug bolts.
  - Remove the ignition coil-on-plugs.