


Positive Crankcase Ventilation (PCV) Valve


Removal

NOTE: Removal steps in this procedure may contain installation details.

- 1. Disconnect the PCV valve quick release coupling.
Refer to: Quick Release Coupling (310-00 Fuel System - General Information - 3.0L EcoBoost) .

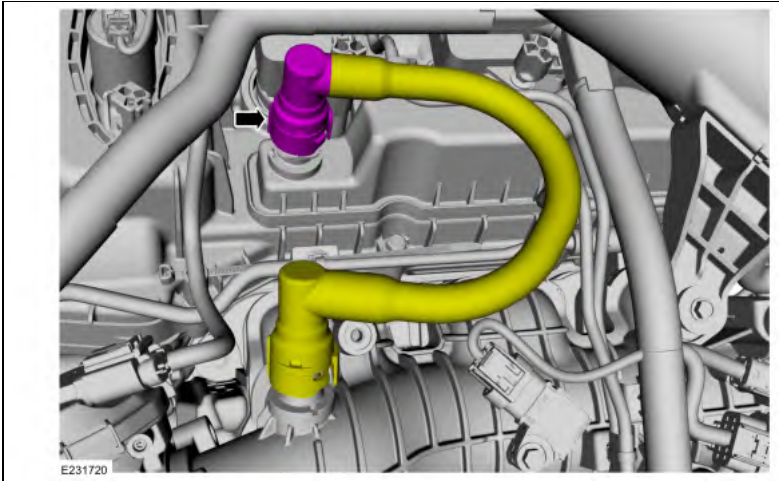

- 2. **NOTICE: A new PCV valve must be installed if removed from the valve cover. Damage will occur to the locking mechanism on the PCV valve.**
Rotate the PCV valve counterclockwise, then remove and discard the PCV valve.

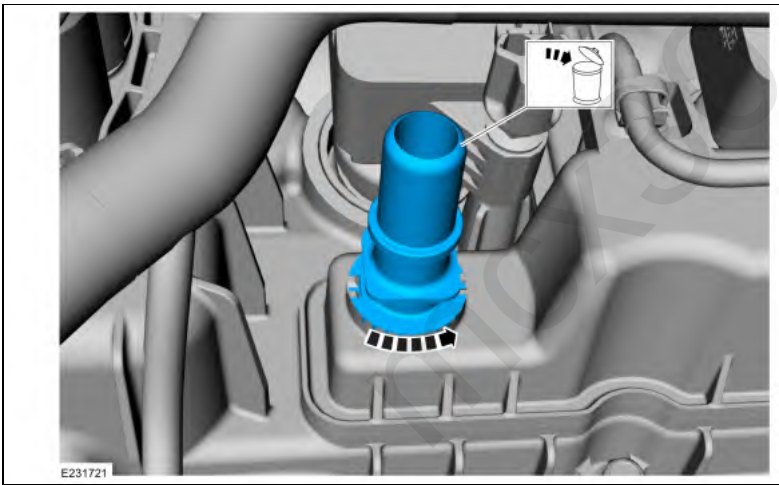

Installation

- 1. Lubricate the new PCV valve O-ring seal with clean engine oil.