


Exhaust Gas Recirculation (EGR) Inlet Tube


Removal

NOTE: Removal steps in this procedure may contain installation details.

1.
 1. Remove the fastener.
 2. Remove the EGR inlet tube nut.

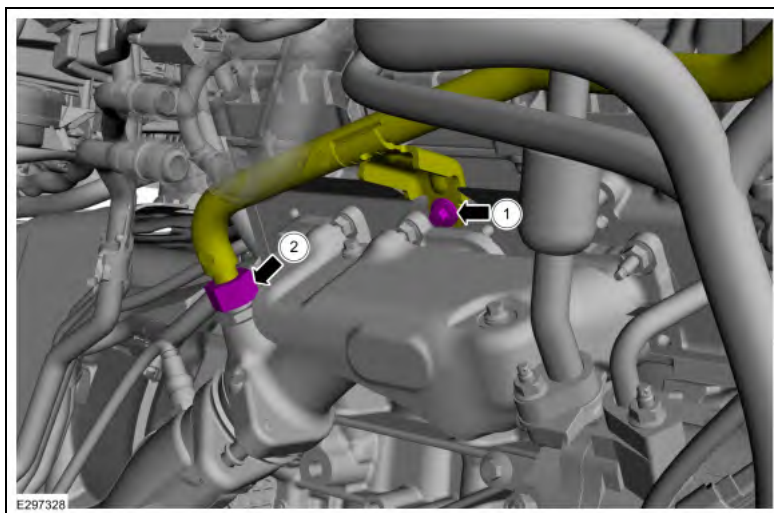

2.
 - Remove the fasteners.
 - Remove the EGR valve inlet tube.
 - Remove the gasket and discard.

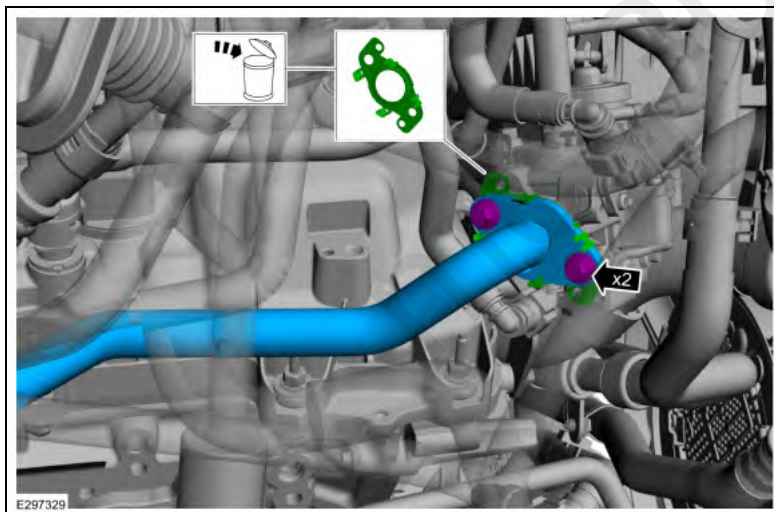

Installation

1.
 - Install the new gasket.
 - Install the EGR valve inlet tube.
 - Install the fasteners and hand tighten at this stage.