



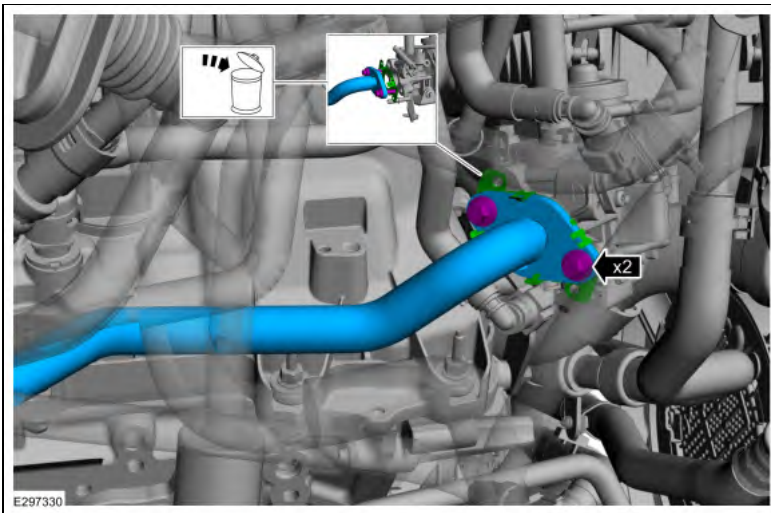

2.
 1. Install the EGR inlet tube nut and hand tighten at this stage.
 2. Install the fastener and hand tighten at this stage.

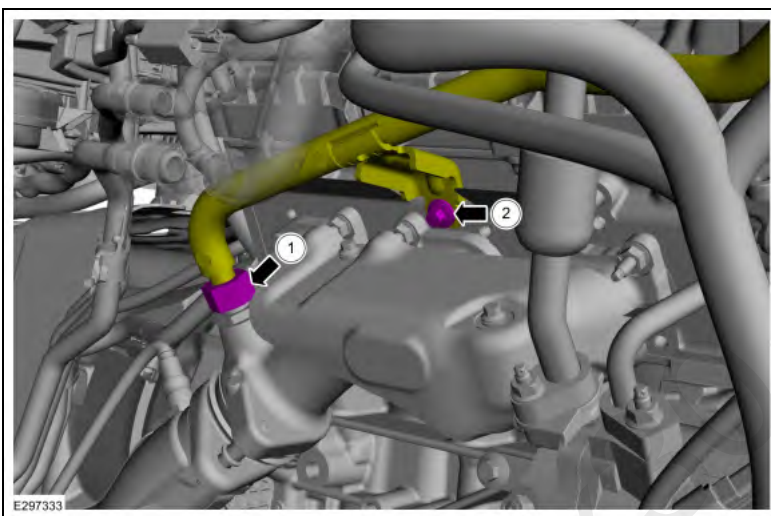

3. Tighten the EGR inlet tube fasteners.
Torque: 89 lb.in (10 Nm)