


Differential Pressure Feedback Exhaust Gas Recirculation (EGR) Sensor

Removal

NOTE: Removal steps in this procedure may contain installation details.

1.
 - Disconnect the electrical connector.
 - Disconnect the differential pressure sensor hoses and position it aside.
 - Remove the bolt and remove the differential pressure sensor.
Torque: 80 lb.in (9 Nm)

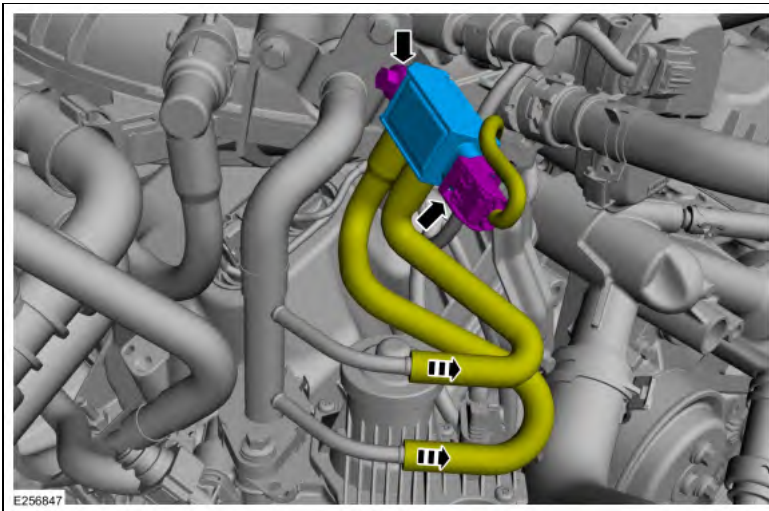

Installation

1. To install, reverse the removal procedure.