



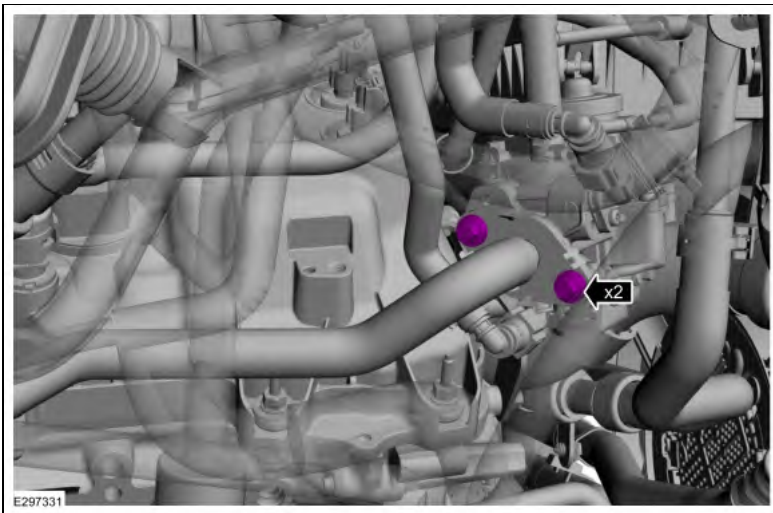


- 4.
1. Tighten the EGR inlet tube nut.
Torque: 30 lb.ft (40 Nm)
 2. Tighten the EGR inlet tube bracket fastener.
Torque:
Stage 1: 177 lb.in (20 Nm)
Stage 2: 45°

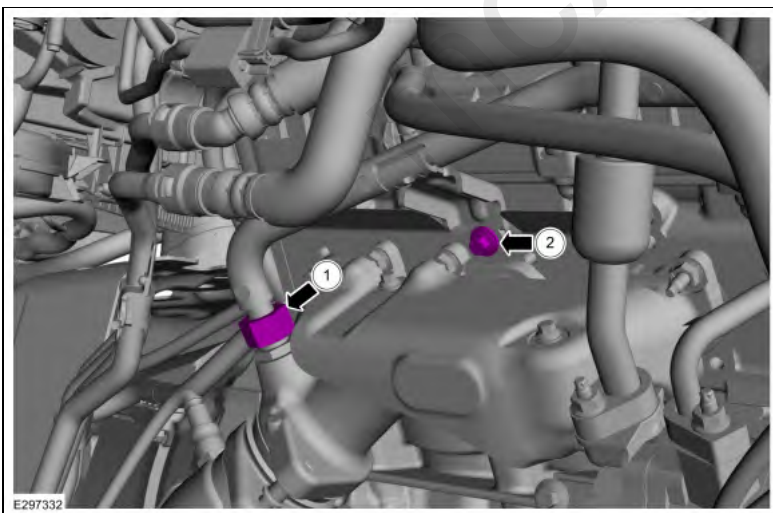


Exhaust Gas Recirculation (EGR) Outlet Tube

Removal


1. Loosen the EGR inlet tube fasteners.

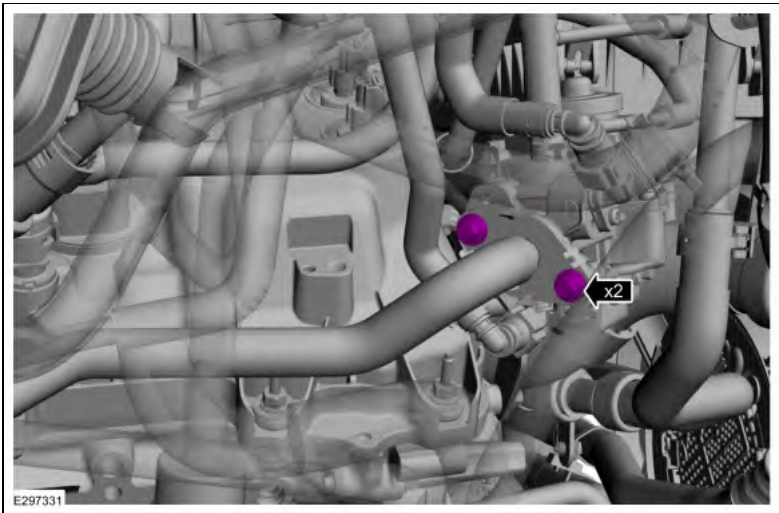


2.
 1. Loosen the EGR inlet tube nut.
 2. Loosen the EGR inlet tube bracket fastener.

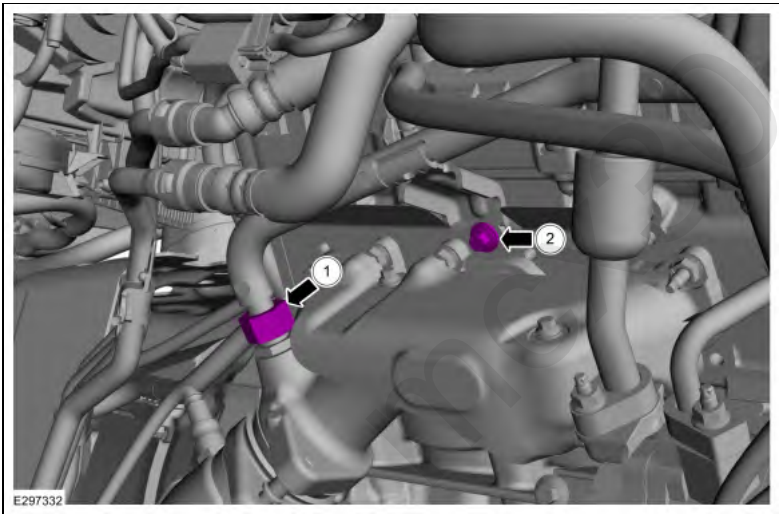

3. Loosen the EGR valve bracket fasteners.

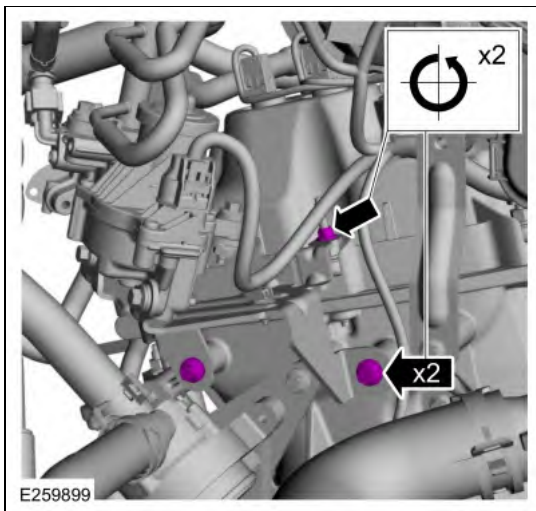

- 4.
- Remove the EGR valve outlet tube fasteners.

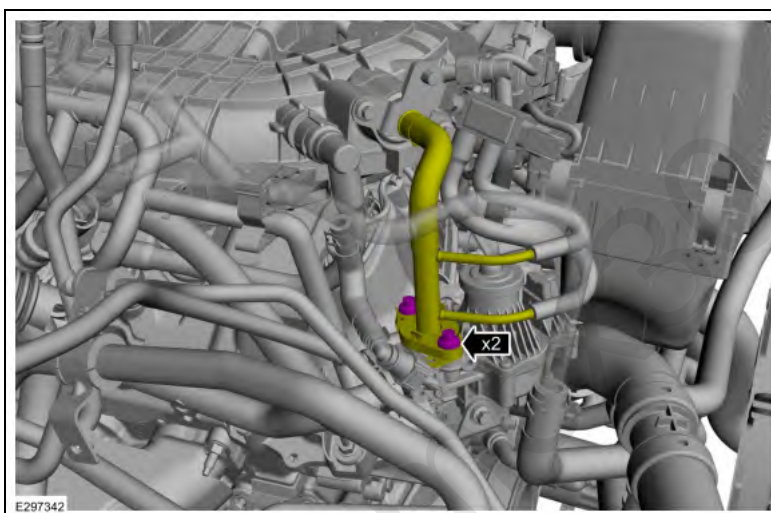

- 5.
- Position aside the differential pressure feedback EGR sensor hose.
 - Remove the fastener and position aside the differential pressure feedback EGR sensor.
 - Remove the fasteners and EGR valve outlet tube.