


Air Cleaner Outlet Pipe

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the following items:
 1. Loosen the clamps.
Torque: 44 lb.in (5 Nm)
 2. Disconnect the quick release coupling and position aside the crankcase ventilation tube. Remove the aircleaner outlet pipe.
Refer to: Quick Release Coupling (310-00C) .

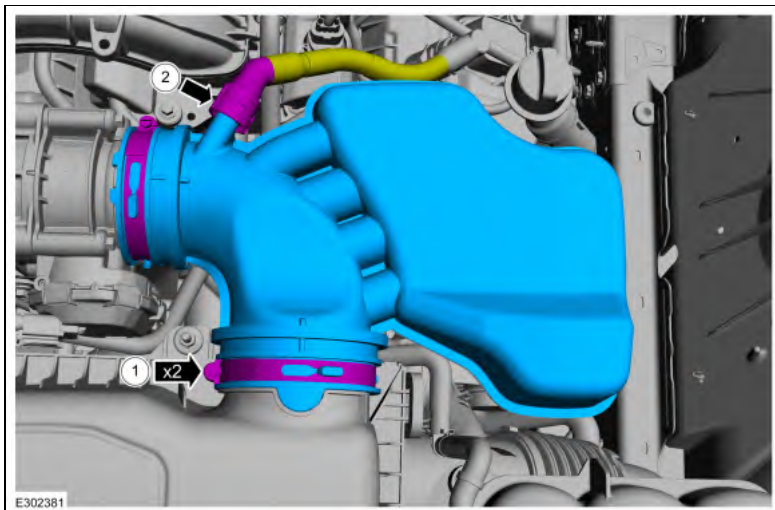

Installation

1. To install, reverse the removal procedure.