


Intake Air Distribution and Filtering - Component Location

Intake Air Distribution and Filtering

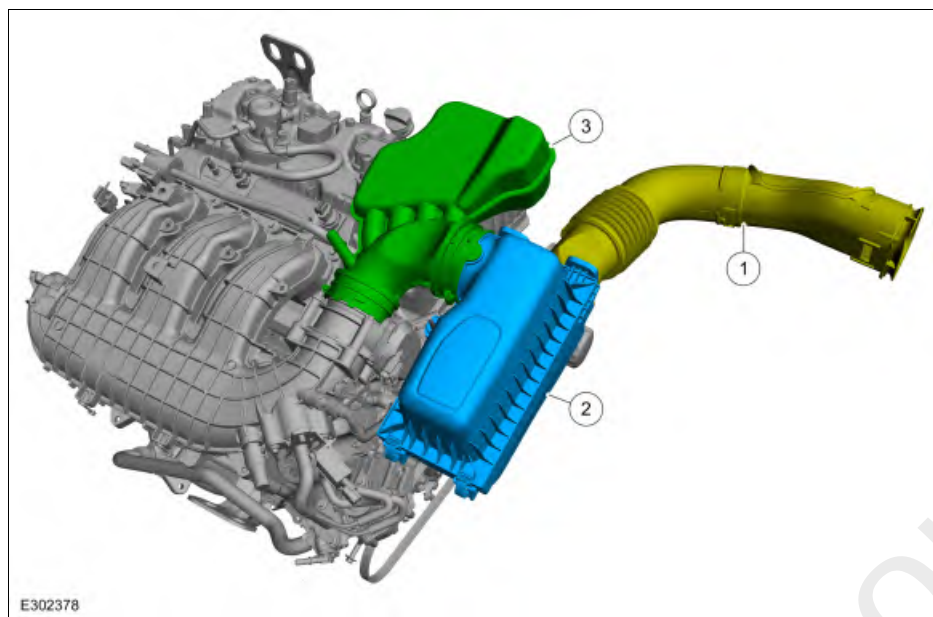

Item	Description
1	Air cleaner inlet pipe
2	Air cleaner
3	Air cleaner outlet pipe & resonator assembly