


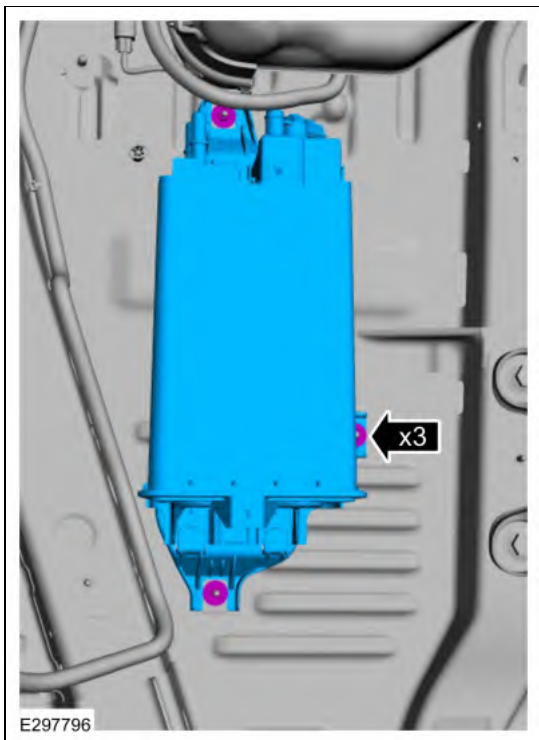

Installation

1. **NOTE:** Ensure new EVAP canister mounting clips and bracket are used.
2. To install, reverse the removal procedure.

Evaporative Emission Canister Purge Valve


Removal

⚠ **WARNING:** Do not smoke, carry lighted tobacco or have an open flame of any type when working on or near any fuel-related component. Highly flammable mixtures may be present and may be ignited. Failure to follow these instructions may result in serious personal injury.


⚠ **WARNING:** Do not carry personal electronic devices such as cell phones, pagers or audio equipment of any type when working on or near any fuel-related component. Highly flammable mixtures may be present and may be ignited. Failure to follow these instructions may result in serious personal injury.

NOTE: Removal steps in this procedure may contain installation details.

1.
 - Disconnect the quick release coupling.
Refer to: Quick Release Coupling (310-00B) .
 - Detach the retainers.

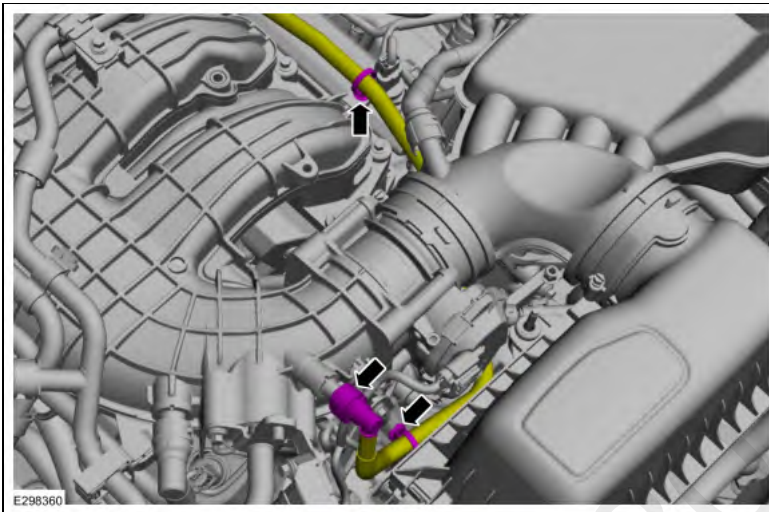

2.
 - Disconnect the electrical connector.
 - Disconnect the quick release coupling and remove the EVAP purge valve.
Refer to: Quick Release Coupling (310-00B) .

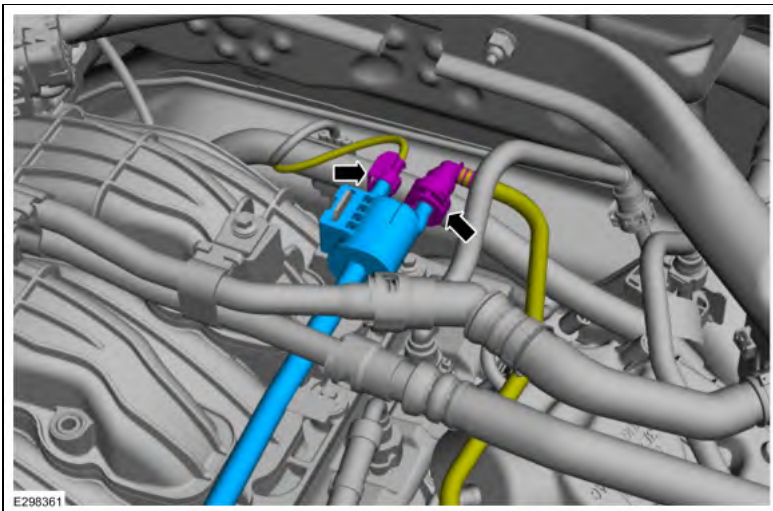

Installation

1. To install, reverse the removal procedure.