

Evaporative Emission Canister

Removal

⚠ **WARNING:** Do not smoke, carry lighted tobacco or have an open flame of any type when working on or near any fuel-related component. Highly flammable mixtures may be present and may be ignited. Failure to follow these instructions may result in serious personal injury.


⚠ **WARNING:** Do not carry personal electronic devices such as cell phones, pagers or audio equipment of any type when working on or near any fuel-related component. Highly flammable mixtures may be present and may be ignited. Failure to follow these instructions may result in serious personal injury.

⚠ **WARNING:** Always disconnect the battery ground cable at the battery when working on an evaporative emission (EVAP) system or fuel-related component. Highly flammable mixtures may be present and may be ignited. Failure to follow these instructions may result in serious personal injury.

NOTE: Removal steps in this procedure may contain installation details.

1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).

2.
 1. Remove the fasteners.
Torque: 53 lb.in (6 Nm)
 2. Remove the fastener.
Torque: 22 lb.in (2.5 Nm)
 3. Remove the pushpins.
 4. Remove the fasteners.

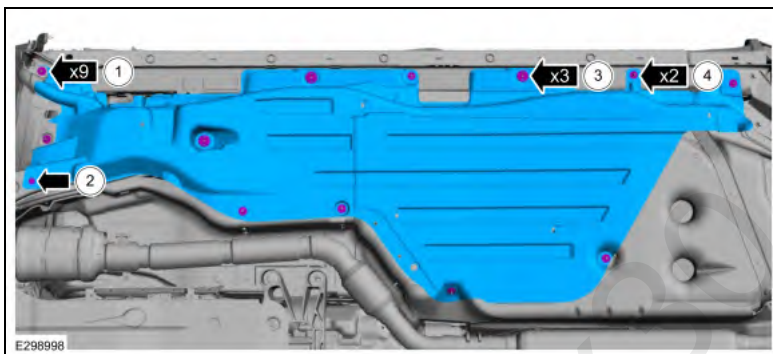

3.
 1. Remove the fastener.
Torque: 97 lb.in (11 Nm)
 2. Remove the fastener.
Torque: 97 lb.in (11 Nm)
 3. Remove the fastener.
Torque: 97 lb.in (11 Nm)
 4. Remove the fastener.
Torque: 53 lb.in (6 Nm)