


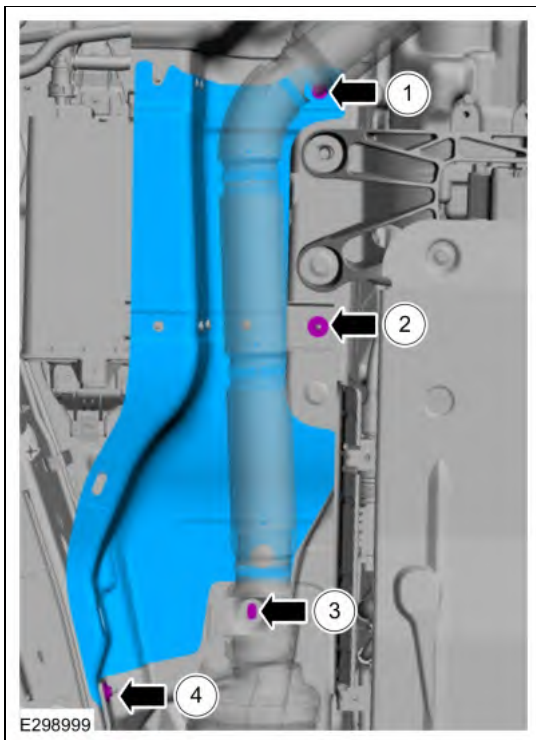

4. Disconnect the quick release couplings.

Refer to: Quick Release Coupling (310-00 Fuel System - General Information - 3.3L Duratec-V6 - Hybrid (BP)).