




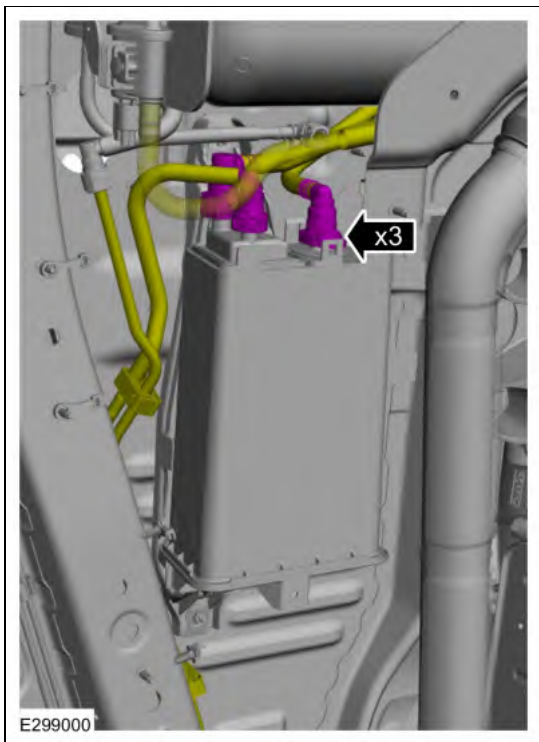


5. Remove the fasteners and EVAP canister along with bracket.
Torque: 62 lb.in (7 Nm)

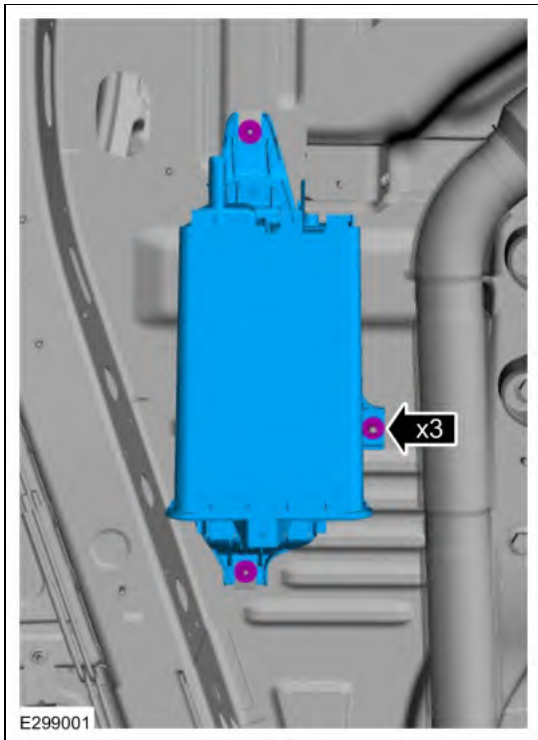

- 6.
- Remove the fastener.
Torque: 80 lb.in (9 Nm)
 - Slide the EVAP canister and remove it from the bracket.

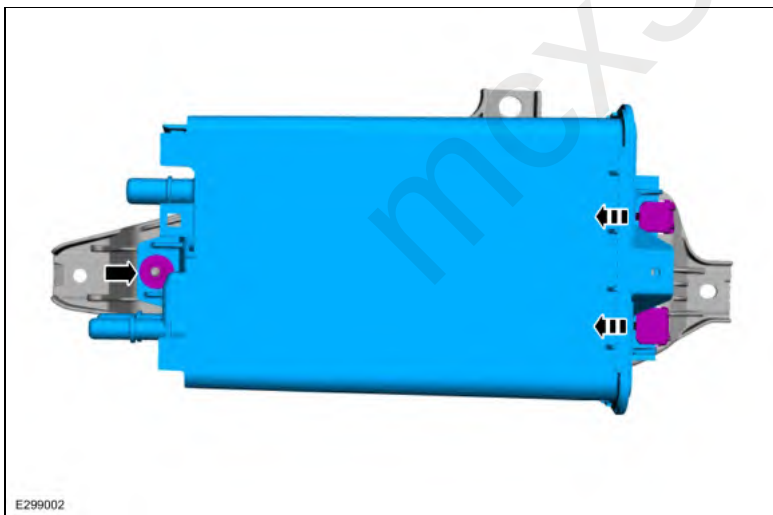

7. Remove and discard the clips.

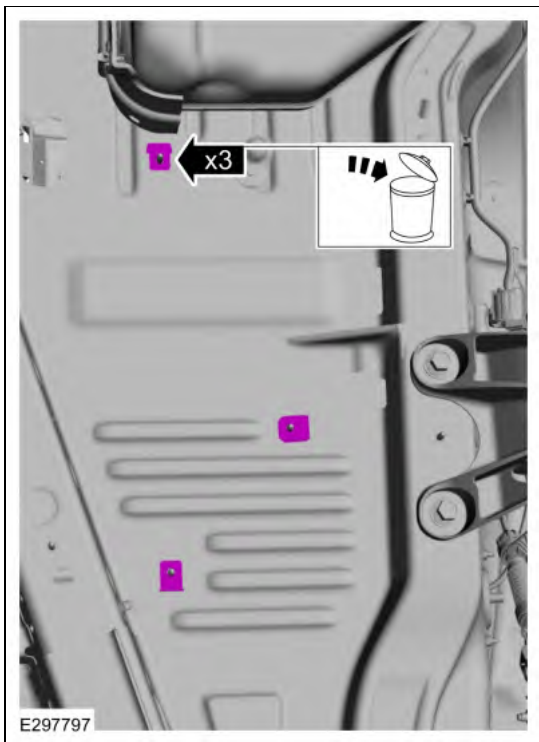

Installation

1. **NOTE:** *Ensure new EVAP canister mounting clips are used.*
2. To install, reverse the removal procedure.

Evaporative Emission Canister Purge Valve


Removal

⚠ **WARNING:** Do not smoke, carry lighted tobacco or have an open flame of any type when working on or near any fuel-related component. Highly flammable mixtures may be present and may be ignited. Failure to follow these instructions may result in serious personal injury.


⚠ **WARNING:** Do not carry personal electronic devices such as cell phones, pagers or audio equipment of any type when working on or near any fuel-related component. Highly flammable mixtures may be present and may be ignited. Failure to follow these instructions may result in serious personal injury.

NOTE: Removal steps in this procedure may contain installation details.

1.
 - Disconnect the quick release coupling.
Refer to: Quick Release Coupling (310-00B) .
 - Detach the retainers.

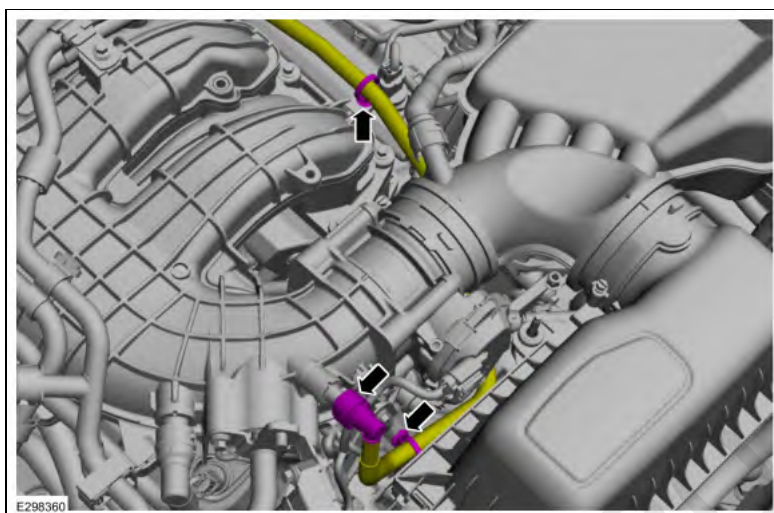

2.
 - Disconnect the electrical connector.
 - Disconnect the quick release coupling and remove the EVAP purge valve.
Refer to: Quick Release Coupling (310-00B) .

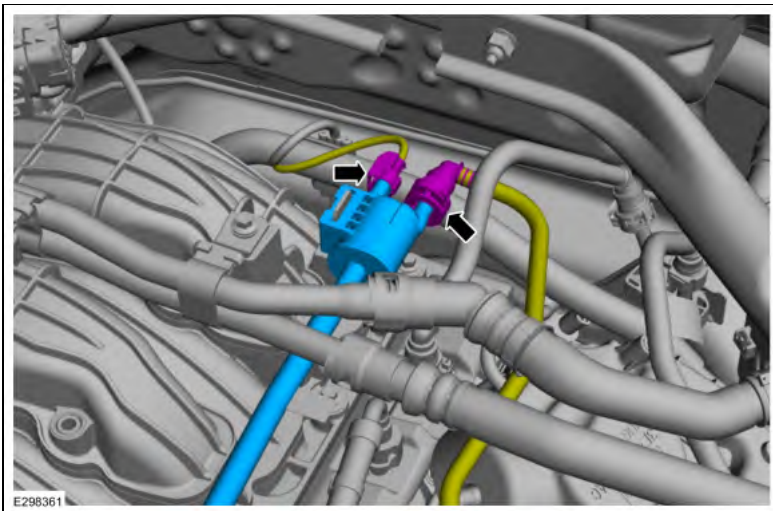

Installation

1. To install, reverse the removal procedure.