


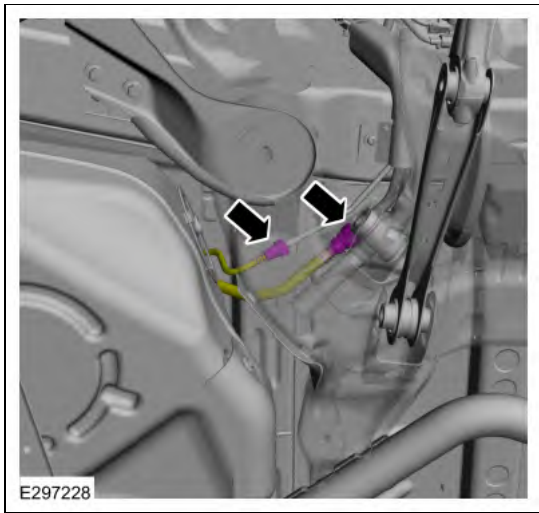


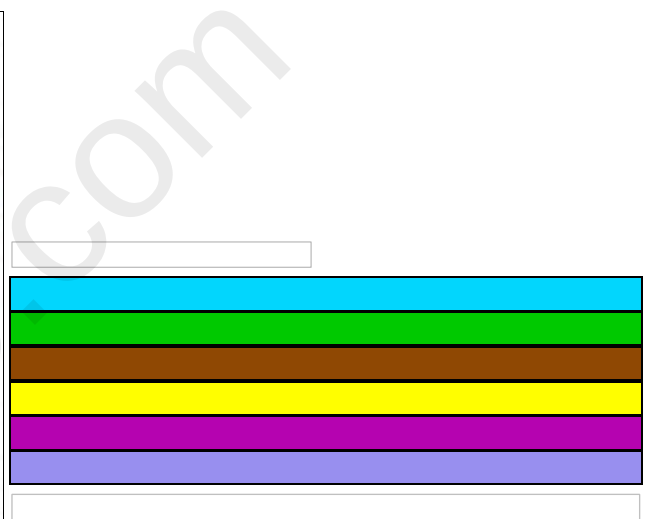


8. Remove the bolts and the fuel tank.
Use the General Equipment: Transmission Jack
Torque: 35 lb.ft (47 Nm)

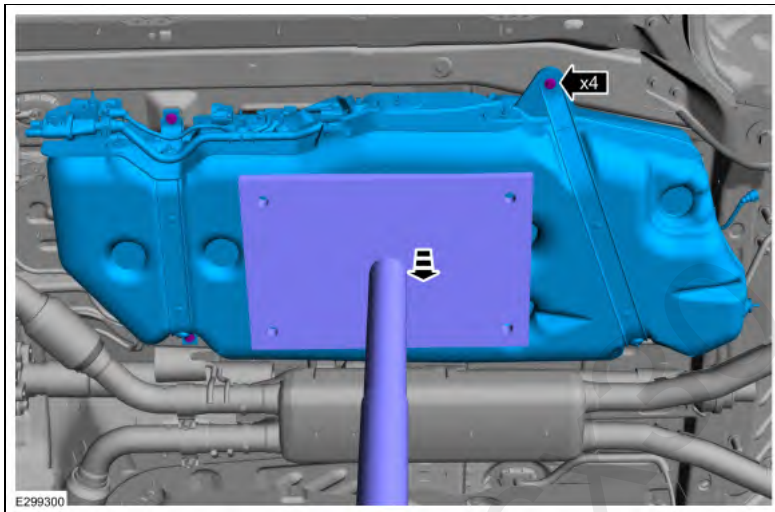


9. Remove the fuel tank insulator.

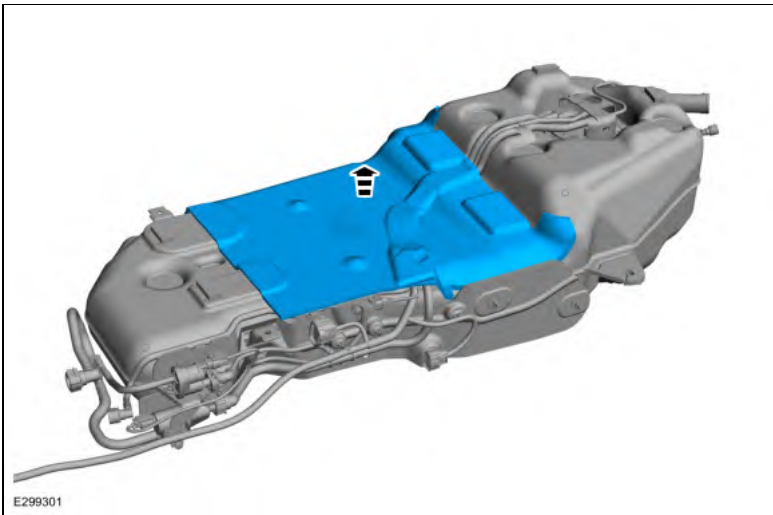

- 10.
- Disconnect the electrical connectors.
 - Disconnect the quick release couplings.
Refer to: Quick Release Coupling (310-00D) .

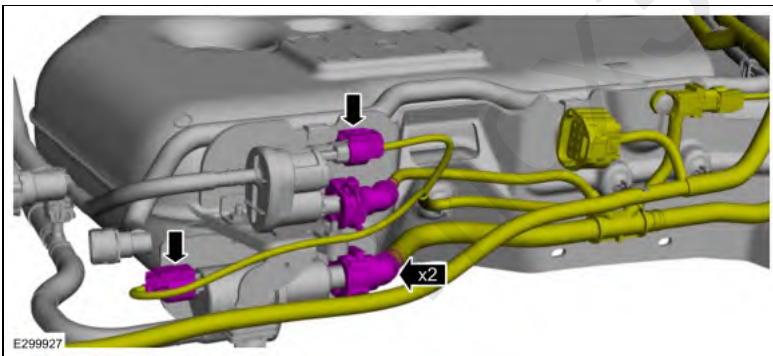

- 11.
1. Lift the solenoid valve upward from the bracket.
 2. Move the vapor vent valve downward from the bracket, remove the vapour vent valve and solenoid valve as an assembly.

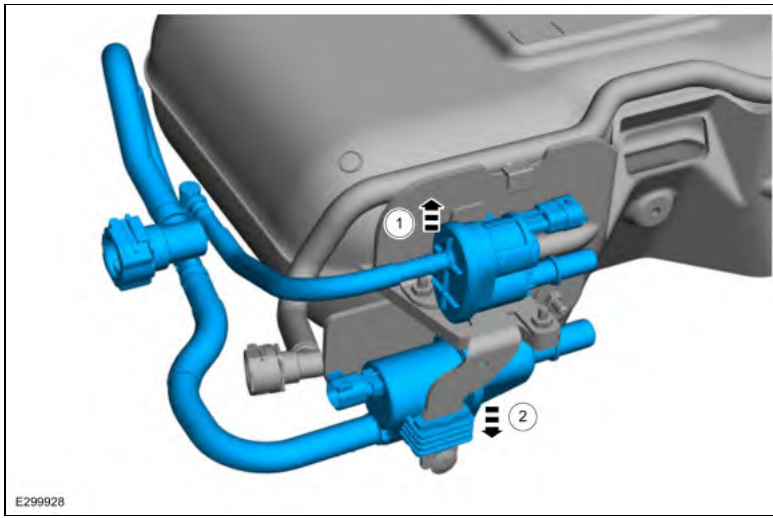

Installation

1. To install, reverse the removal procedure.

mcx30.com

303-14A Electronic Engine Controls - 2.3L EcoBoost (201kW|273PS)

Description and Operation