



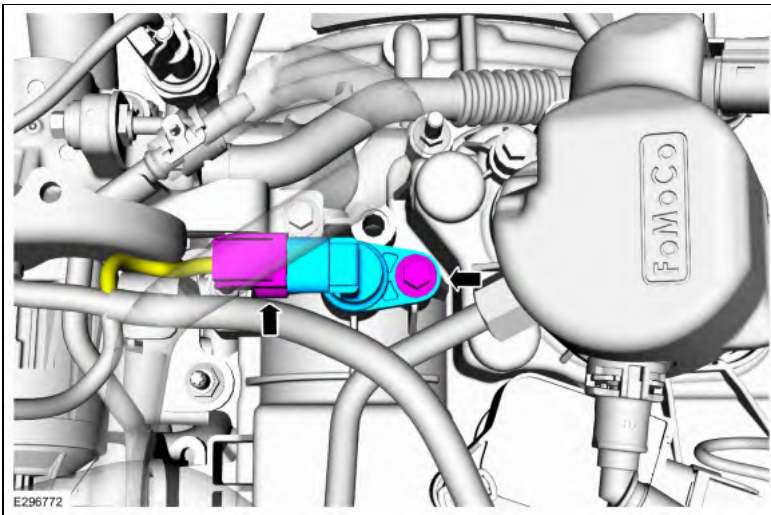

Intake Camshaft Position (CMP) Sensor

3. **NOTICE:** Do not pull the engine appearance cover forward or sideways to remove. Failure to press straight upward on the underside of the cover at the attachment points may result in damage to the cover or engine components.
1. Remove the engine appearance cover nut.
 2. Place your hand under the engine appearance cover at each grommet location and pull straight up to release each grommet from the studs.
 3. After all of the grommets have been released from the studs, remove the appearance cover from the engine.

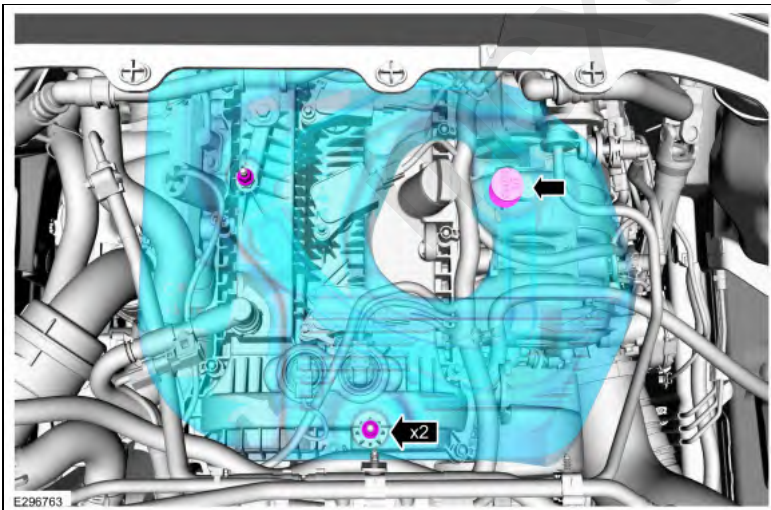

4. Disconnect the electrical connector. Remove the bolt and the intake CMP sensor.
Torque: 97 lb.in (11 Nm)