


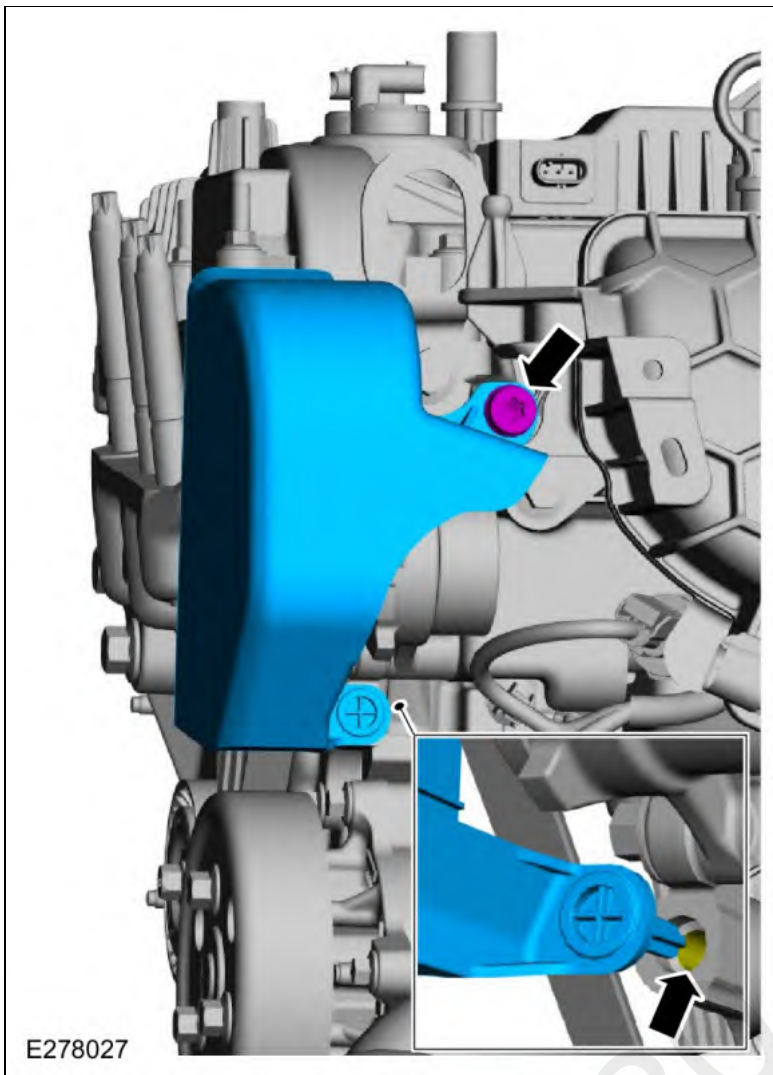

5. Disconnect the electrical connector and remove the FRP sensor.
Torque: 24 lb.ft (33 Nm)