

SECTION 204-01A: Front Suspension — Rear Wheel Drive (RWD)
REMOVAL AND INSTALLATION


2014 F-150 Workshop Manual
Procedure revision date: 10/25/2013

Wheel Bearing and Wheel Hub


Removal and Installation

NOTICE: Suspension fasteners are critical parts that affect the performance of vital components and systems. Failure of these fasteners may result in major service expense. Use the same or equivalent parts if replacement is necessary. Do not use a replacement part of lesser quality or substitute design. Tighten fasteners as specified.


1. **NOTE:** The wheel speed sensor electrical connector is located in the engine compartment secured to the fender apron.

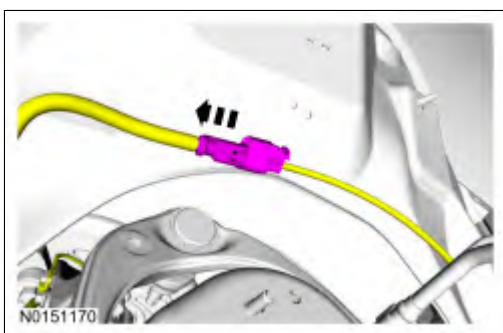

2. Remove the wheel and tire. Refer to [Section 204-04](#).
3.
 - To install, tighten to 12 Nm (106 lb-in).

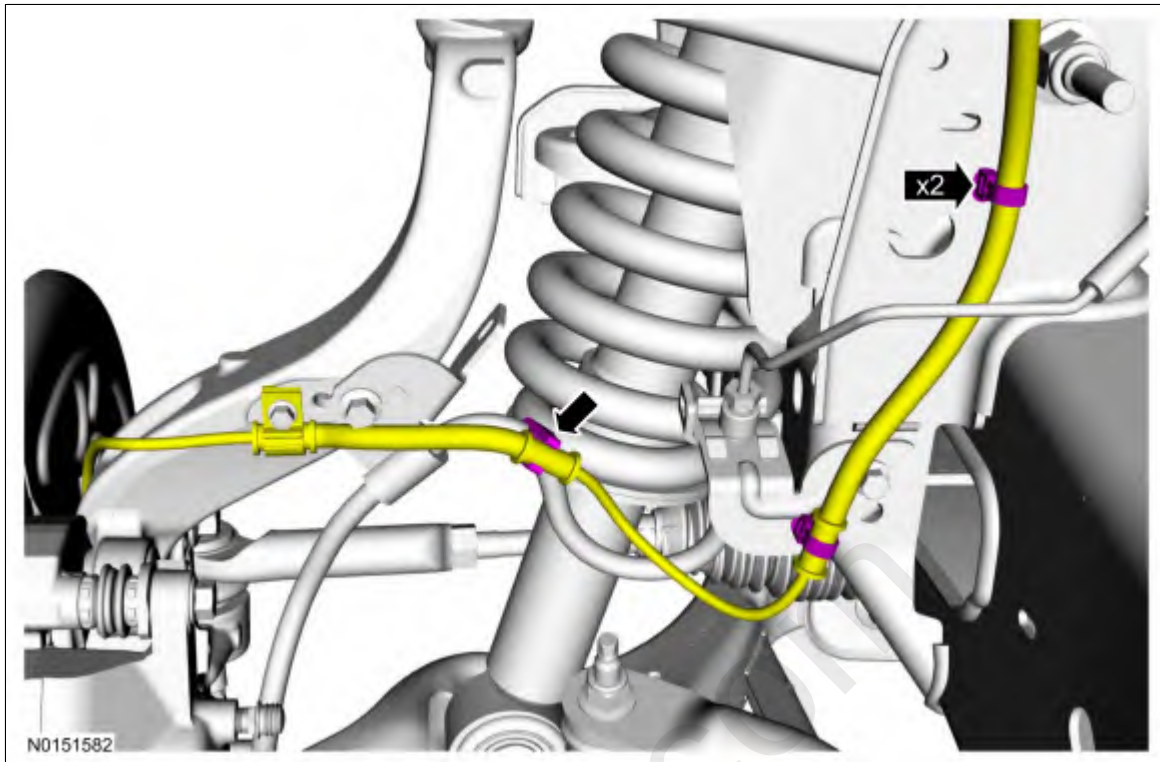

4. Remove the brake disc. Refer to [Section 206-03](#).
5.
 - To install, tighten to 175 Nm (129 lb-ft).

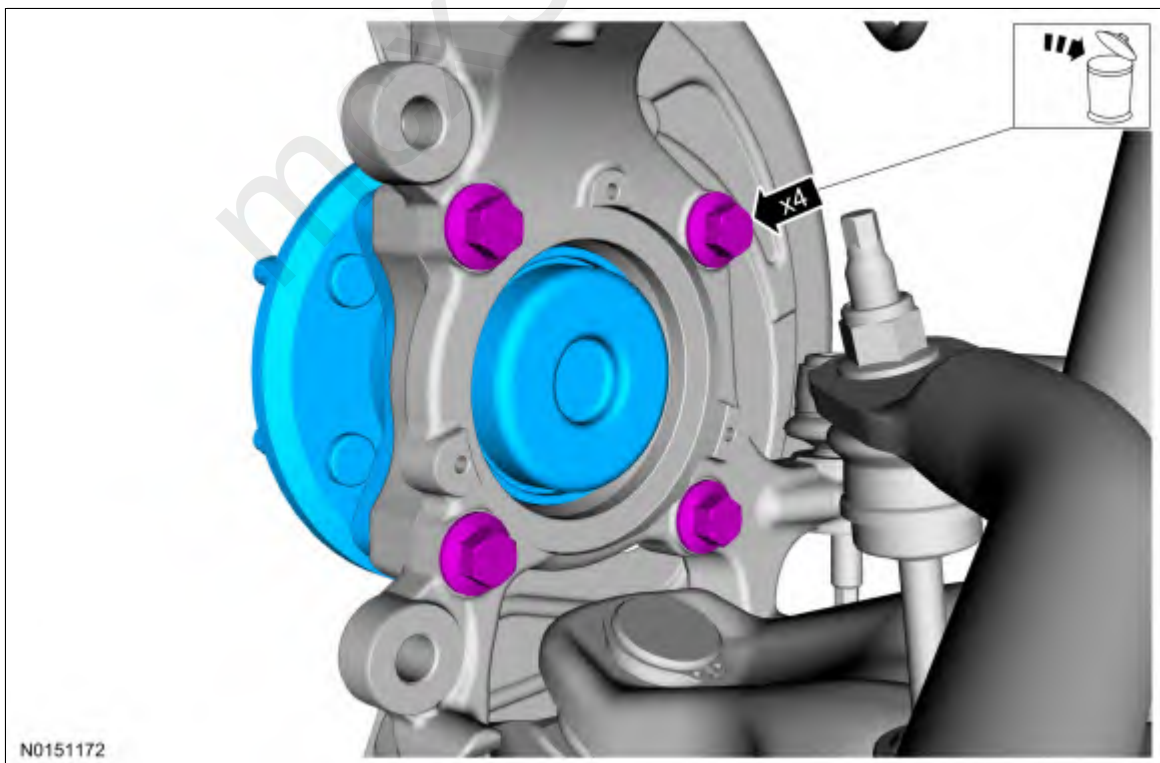

6. To install, reverse the removal procedure.
-

mcx30.com