

SECTION 204-04: Wheels and Tires
DISASSEMBLY AND ASSEMBLY OF SUBASSEMBLIES

2014 F-150 Workshop Manual
Procedure revision date: 10/25/2013

Tire Pressure Monitoring System (TPMS) Sensor

Disassembly

1. **NOTE:** The Tire Pressure Monitoring System (TPMS) sensor cannot be removed without disassembly of the wheel and tire.

Disassemble the wheel and tire. For additional information, refer to [Wheel and Tire](#) in this section.

mcx30.com