

SECTION 415-00C: Information and Entertainment Systems — 4.2-Inch (107 mm)
Display

REMOVAL AND INSTALLATION


2014 F-150 Workshop
Manual

Procedure revision date:
10/25/2013

Front Controls Interface Module (FCIM)

Removal and Installation

1. Remove the LH center instrument panel finish panel. For additional information, refer to [Section 501-12](#).
2. Remove the RH center instrument panel finish panel. For additional information, refer to [Section 501-12](#).
3. Remove the 4 screws and the Front Controls Interface Module (FCIM).
 - Disconnect the electrical connectors.
 - To install, tighten to 3 Nm (27 lb-in).

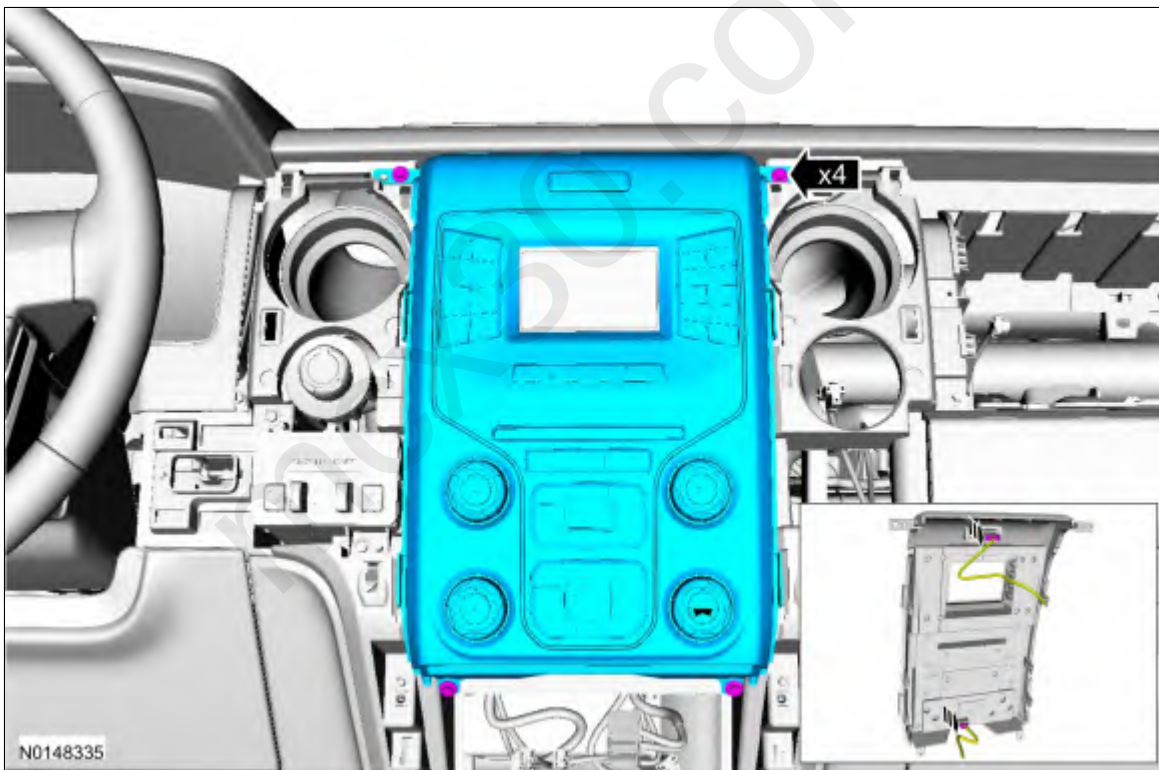

4. To install, reverse the removal procedure.

mcx30.com