

SECTION 415-00D: Information and Entertainment Systems — 8-Inch (203 mm)  
Touchscreen


REMOVAL AND INSTALLATION

2014 F-150 Workshop  
Manual

Procedure revision date:  
10/25/2013


## Speaker — Door

### Front Door Tweeter Speaker

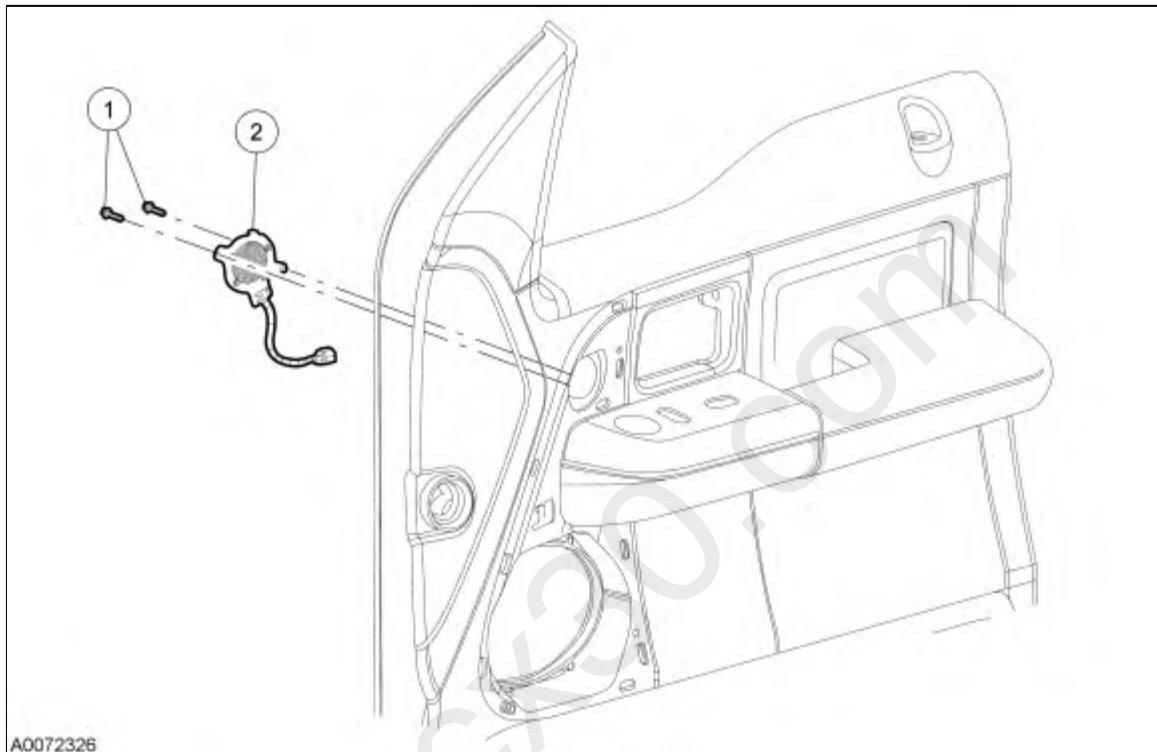


| Item | Part Number   | Description                         |
|------|---------------|-------------------------------------|
| 1    | W701678       | Tweeter speaker screws (2 required) |
| 2    | 19B170/19B171 | Tweeter speaker (RH/LH)             |

### Front Door Speaker

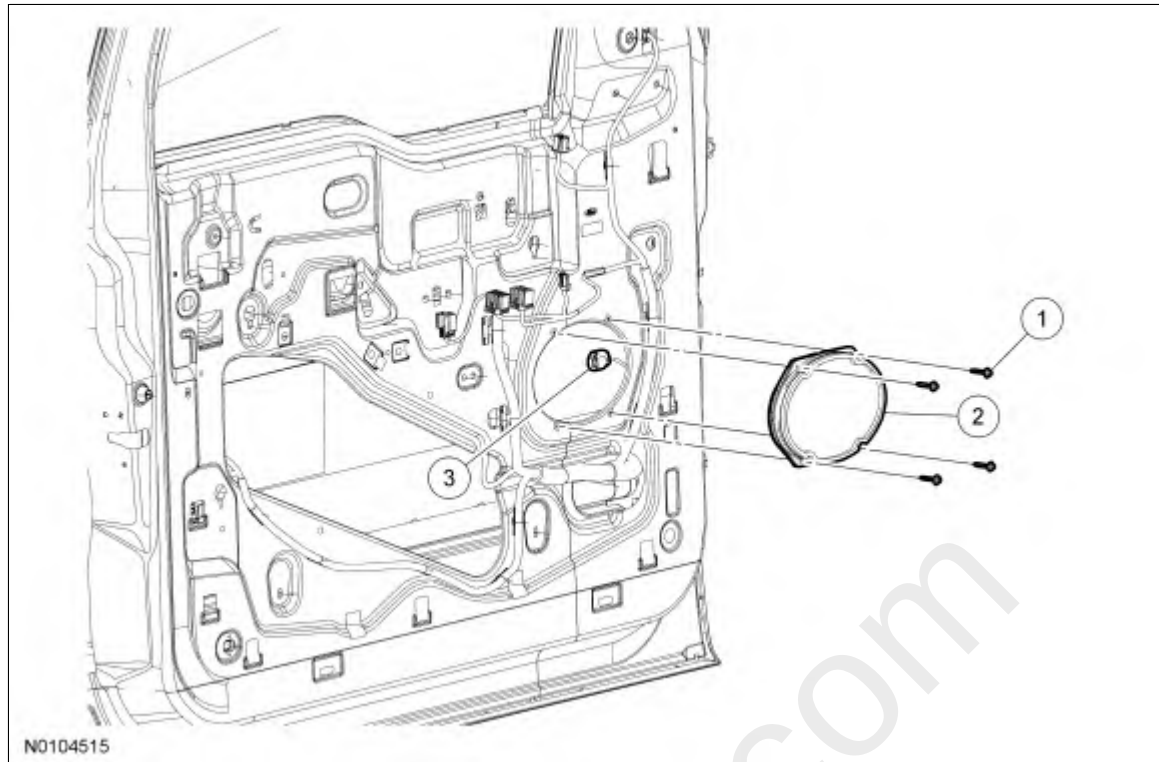

| Item | Part Number | Description                                                    |
|------|-------------|----------------------------------------------------------------|
| 1    | W707628     | Front door speaker screws (4 required)                         |
| 2    | 18808       | Front door speaker                                             |
| 3    | —           | Front door speaker electrical connector (part of door harness) |

### Rear Door Speaker

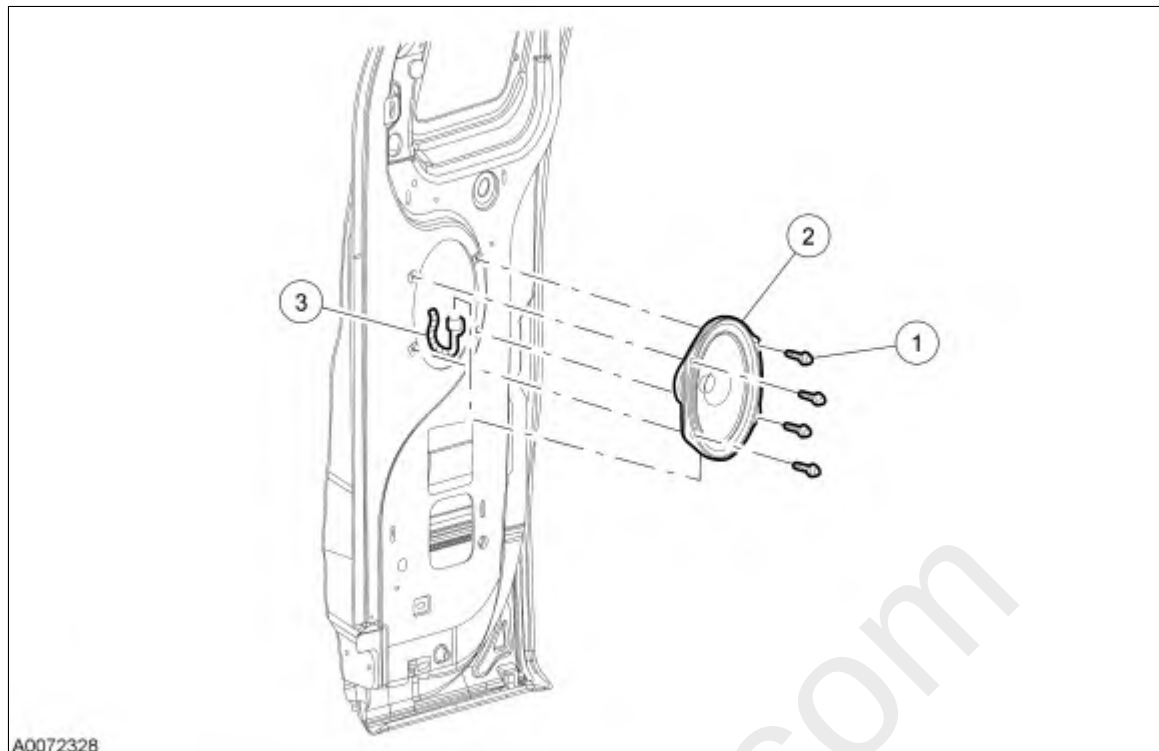

A0072328

| Item | Part Number | Description                       |
|------|-------------|-----------------------------------|
| 1    | W706766     | Rear speaker screws (4 required)  |
| 2    | 18808       | Rear speaker                      |
| 3    | 180103      | Rear speaker electrical connector |

## Removal and Installation

### Front door

1. Remove the front door trim panel. For additional information, refer to [Section 501-05](#).
2. Remove the screws (2 for the tweeter, 4 for the door speaker) and the speaker.
  - Disconnect the electrical connector.

### Rear door

3. Remove the rear door trim panel. For additional information, refer to [Section 501-05](#).
4. Remove the 4 screws and the rear door speaker.
  - Disconnect the electrical connector.

### All speakers

5. To install, reverse the removal procedure.

mcx30.com