

SECTION 419-01B: Anti-Theft — Passive Anti-Theft System (PATS)
GENERAL PROCEDURES

2014 F-150 Workshop Manual
Procedure revision date: 10/25/2013

Key Programming — Enable/Disable Spare Key Programming

Special Tool(s)

	Vehicle Communication Module (VCM) and Integrated Diagnostic System (IDS) software with appropriate hardware, or equivalent scan tool
---	---

NOTE: This procedure provides the capability to enable/disable the normal customer spare key programming procedure detailed in the Owner's Literature and [Key Programming — Program a Key Using Two Programmed Keys](#). If spare key programming is disabled, spare keys can only be programmed by using the [Key Programming Using Diagnostic Equipment](#) procedure in this section.

1. Turn the key from the OFF position to the RUN position.
 2. From the scan tool, enter TOOLBOX. Select BODY — SECURITY — PATS Functions and follow the Integrated Diagnostic System (IDS) on-screen instructions to ENTER SECURITY ACCESS.
 3. From the scan tool menu select "Customer Spare Key Programming Enable" or "Customer Spare Key Programming Disable" and follow the IDS on-screen instructions.
-