

SECTION 501-05: Interior Trim and Ornamentation
REMOVAL AND INSTALLATION


2014 F-150 Workshop Manual
Procedure revision date: 10/25/2013

Cowl Side Trim Panel

Removal and Installation

Both sides

1. Pull upward to release the scuff plate clips and remove the front door scuff plate.
 - Detach the scuff plate from the weatherstrip.

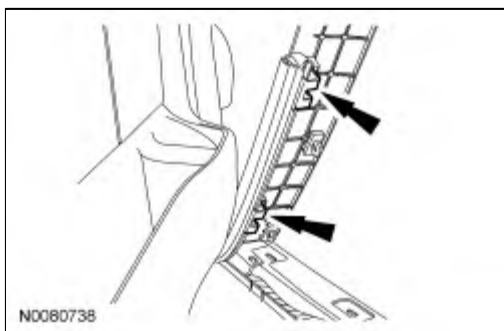


LH side


2. Remove the cowl trim panel.

RH side

3. Remove the fuse panel access door.

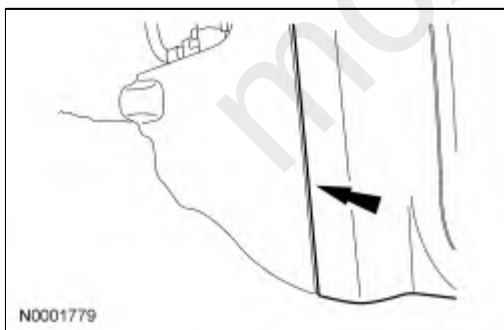

4. Remove the pin-type retainer from the cowl trim panel.

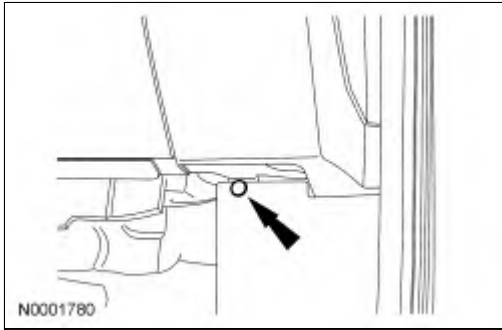**Both sides**

5. Remove the cowl trim panel.
6. **NOTE:** Make sure the cowl side trim panel J-hook is correctly installed.

To install, reverse the removal procedure.
