


SECTION 501-05: Interior Trim and Ornamentation
REMOVAL AND INSTALLATION

2014 F-150 Workshop Manual
Procedure revision date: 10/25/2013

Door Trim Panel — Front

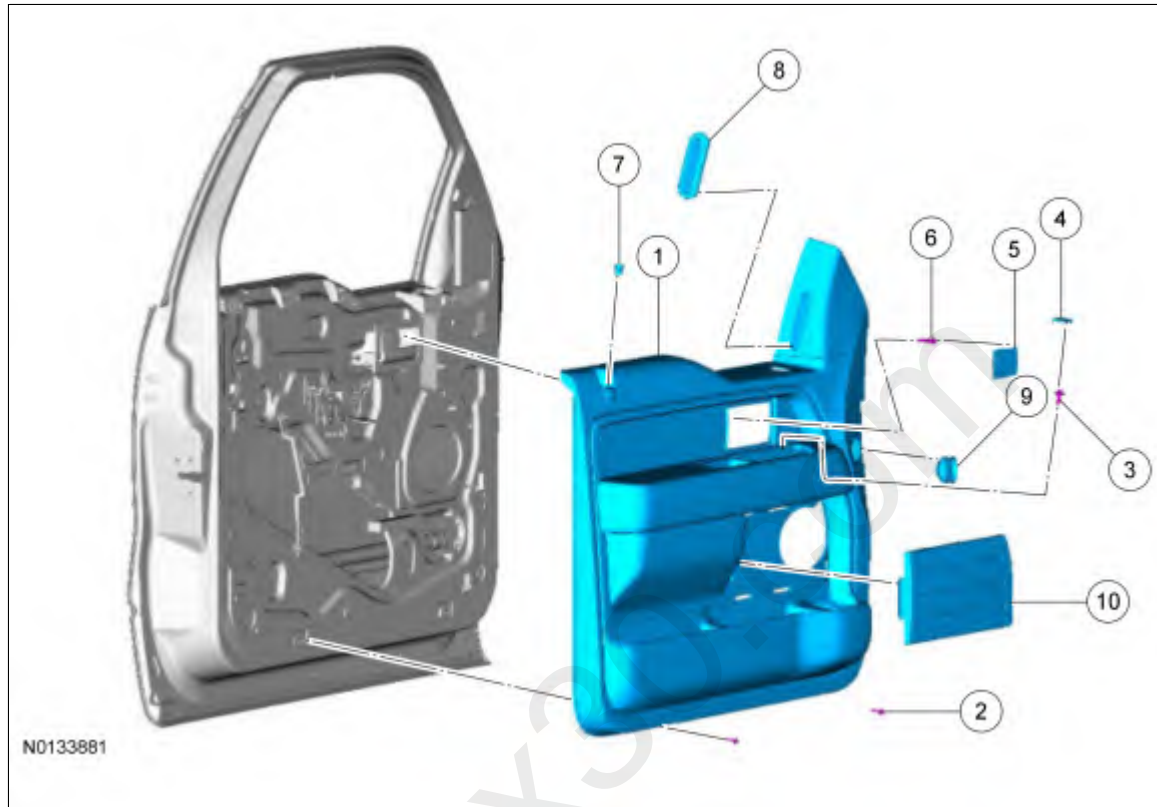


Item	Part Number	Description
1	23942	Front door trim panel
2	W701930	Front door trim panel lower screws
3	W701930	Front door pull cup screw
4	237W24	Front door pull cup screw cover
5	31458	Front door handle screw cover
6	W500215	Front door handle screw
7	21999	Door lock button bezel
8	18202A42 / 18202A43	Demist grille (RH/LH)
9	19E882	Demist grommet
10	18978C / 18979C	Speaker grille (RH/LH)

Removal and Installation


NOTE: LH side shown, RH side similar.

1. If equipped, remove the window regulator handle.
 1. Separate the handle cover from the handle.


2. Remove the screw.
3. Remove the window regulator handle.
4. Remove the spacer.

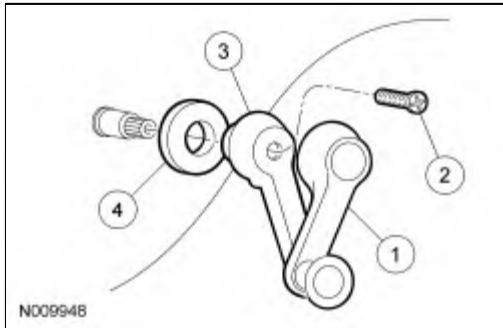


2. Remove the 2 front door trim panel lower screws.

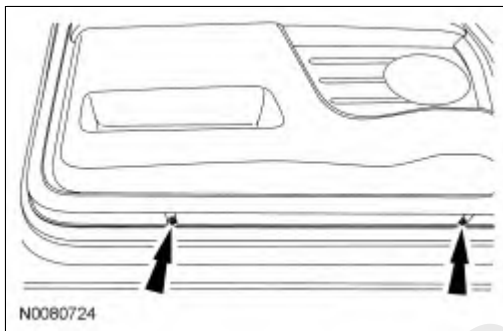


3. Remove the door handle cover plate.

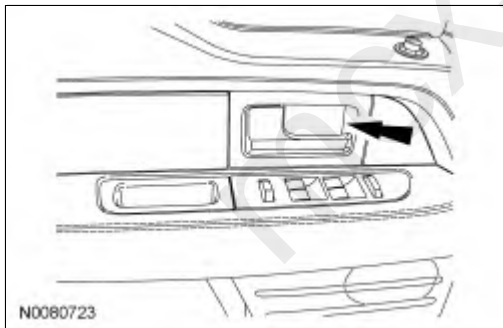


4. Remove the pull cup screw cover.

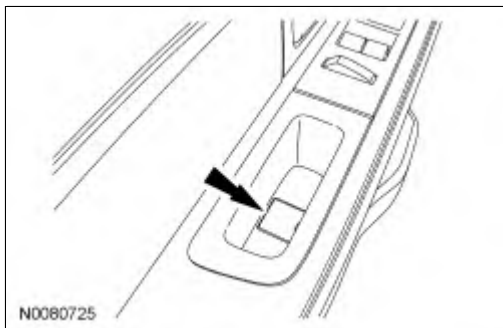

5. Remove the pull cup screw.

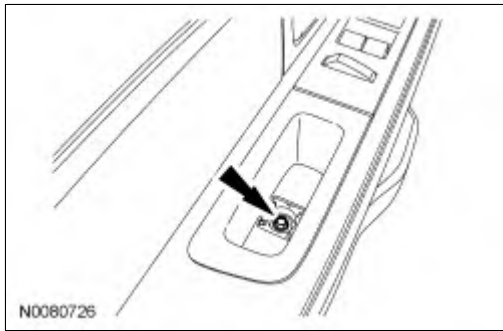

6. Remove the window control switch. For additional information, refer to [Section 501-11](#).
7. Remove the door handle screw.

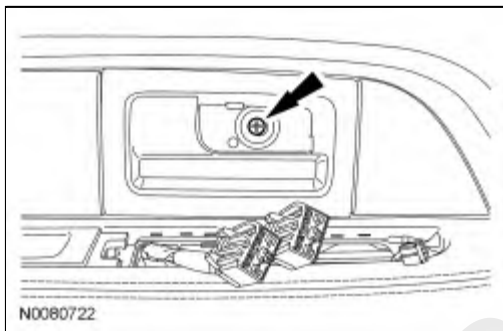

8. **NOTICE:** Do not pull directly outward on the front door trim panel, as damage may occur.

Remove the front door trim panel.

- Lift upward to remove the front door trim panel.
- Disconnect mirror adjustment switch electrical connector.
- Remove the front door handle.
 - Guide the door handle through the opening in the trim panel.

9. To install, reverse the removal procedure.

mcx30.com