


SECTION 501-08: Exterior Trim and Ornamentation
REMOVAL AND INSTALLATION

2014 F-150 Workshop Manual
Procedure revision date: 10/25/2013

Power Running Board (PRB)

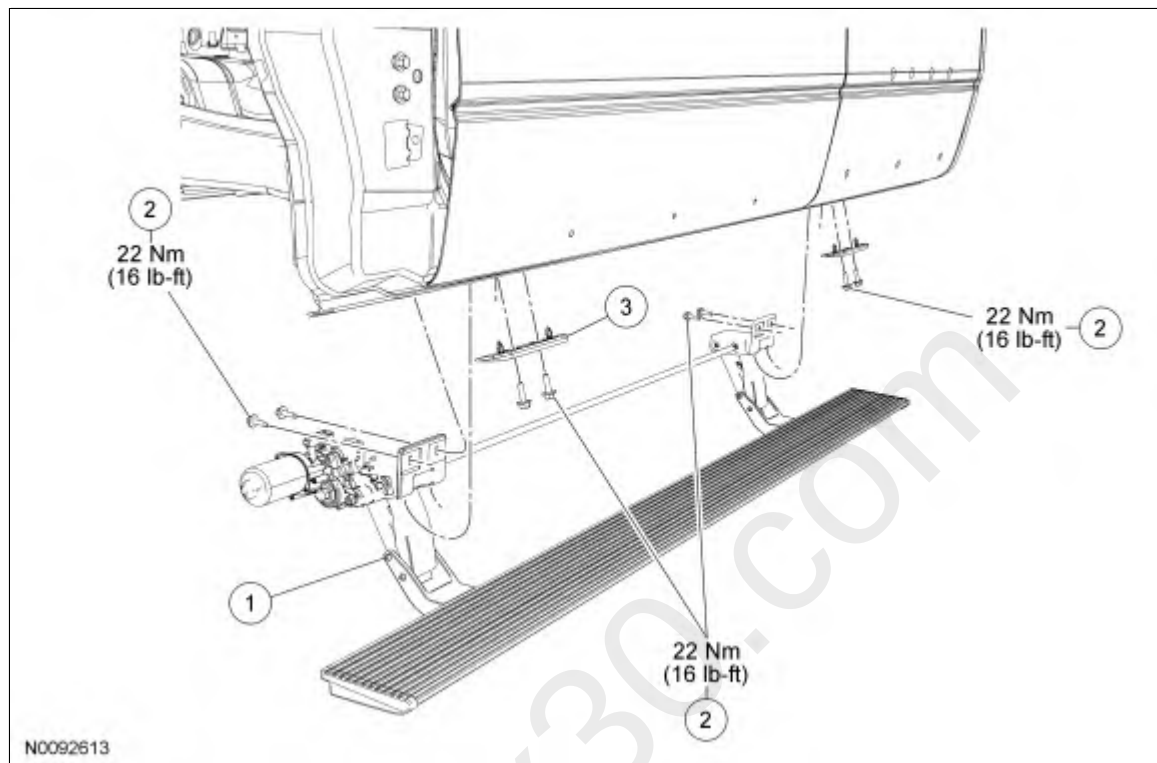

Item	Part Number	Description
1	16451C LH/ 16450E RH	Power Running Board (PRB) assembly
2	W705196	PRB assembly bolts (8 required)
3	16N454	PRB bracket cover (2 required)

Removal and Installation

1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to [Section 100-02](#).
2. **NOTE:** If the Power Running Board (PRB) cannot be extracted, extend the running board by hand.
Extend the PRB.
3. Disconnect the PRB electrical connector.

NOTICE: The following steps require an assistant. Failure to follow this instruction may result in damage to the vehicle.

4. Remove the PRB assembly front bracket upper bolts.
 - To install, tighten to 22 Nm (16 lb-ft).

5. Remove the PRB assembly front bracket lower bolts.
 - To install, tighten to 22 Nm (16 lb-ft).
 6. Remove the PRB assembly rear bracket upper bolts.
 - To install, tighten to 22 Nm (16 lb-ft).
 7. Remove the PRB assembly rear bracket lower bolts.
 - To install, tighten to 22 Nm (16 lb-ft).
 8. Remove the PRB assembly.
 9. To install, reverse the removal procedure.
-

mcx30.com