

SECTION 501-10: Seating
REMOVAL AND INSTALLATION

2014 F-150 Workshop Manual
Procedure revision date: 10/25/2013

Seat Backrest Cover — Rear, Crew Cab

Removal and Installation

NOTE: For parts identification and location, refer to [Seat — Exploded View, Rear, Crew Cab](#) in this section.

1. Remove the seat. For additional information, refer to [Seat — Rear, Crew Cab, 40 Percent](#) or [Seat — Rear, Crew Cab, 60 Percent](#) in this section.
2. For 60 percent seat, remove the backrest. For additional information, refer to [Seat Backrest — Rear, Crew Cab](#) in this section.

NOTE: 60 percent seat has 4 head restraint guides. 40 percent seat 2 head restraint guides.

3. Remove and discard the head restraint guides. For additional information, refer to [Head Restraint Guide Sleeve](#) in this section.
4. If equipped, remove the armrest. For additional information, refer to [Seat Armrest — Rear, Crew Cab](#) in this section.
5. Release the lower J-clip.
 - If 40 percent seat equipped with heat, disconnect the cushion heater mat electrical connector.
6. **NOTICE:** Use care when separating the backrest cover from the hook-and-loop strip or the hook-and-loop strip can be torn from the foam pad.

Partially invert the backrest cover.

- For 60 percent seat, release the center J-clip(s) and armrest cavity retainers, if equipped.
7. Remove all the hog rings attaching the backrest cover to the foam pad.
 - If needed, remove the hog rings attaching the foam pad to the backrest frame and disconnect the backrest heater mat electrical connector (if equipped).
 8. To install, reverse the removal procedure.
-

mcx30.com