

Seat Armrest — Rear, Crew Cab

Disassembly and Assembly

NOTE: For parts identification and location, refer to [Seat — Exploded View, Rear, Crew Cab](#) in this section.

1. Remove the armrest. For additional information, refer to [Seat Armrest — Rear, Crew Cab](#) in this section.
 2. If equipped, release the retainer clips and remove the cupholder bezel cover.
 3. Open the zipper at the rear edge and invert the armrest cover.
 4. Release the front retainer strips and remove the armrest cover.
 - For installation, make sure the pull strap is accessible.
 5. Remove the plastic liner bag.
 6. Remove the armrest foam pad.
 7. Remove the 2 pin-type retainers and plastic cover.
 8. If equipped, remove the 3 screws and cupholder.
 9. To assemble, reverse the disassembly procedure.
-